



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		806235A	1 HOUSING ASSEMBLY-Thermostat	1		
2	22	32803	PLUG-Pipe (3/8 in.)	2		
3	27	806871	GASKET-Thermostat	1		1,2
4	27	53045 1	GASKET-Thermostat Housing	1		1,2
5		807252	2 THERMOSTAT	1		
6	23	806922	SLEEVE	1		
7	10	98794	SCREW (3/8-16 x 1 in.)	2		
8	32	807407	HOSE-Thermostat Housing, to Engi	1		
9	32	807989	HOSE-Cooler to Cooler	1	(USE WITH 10 IN. ENGINE OIL C	
9	32	807406	1 HOSE-Cooler to Cooler	1	(USE WITH 13 IN. ENGINE OIL C	
10	32	808045	HOSE-Fuel Cooler to Power Steerin	1		
11	32	808044	HOSE-Power Steering Oil Cooler to	1		
12	32	17435 79	HOSE-Sea Water Pump to Transon	1		
13	54	815504222	CLAMP	10		
14	32	89718	1 HOSE-Thermostat Housing to Wate	1		
15	54	815504232	CLAMP	2		
16	32	89749	1 HOSE	1	Thermostat Housing to Port Exhau	
17	32	807201	HOSE	1	Thermostat Housing to Starboard E	
18	54	815504220	CLAMP	4		
19		805546A	2 BRACKET-Transmission Oil Cooler	1		
20		77223	3 PAD	1		
21	54	815504224	CLAMP	1		
22	10	86750	SCREW (5/16-18 x 5/8 in.)	1		
23	12	20572	WASHER	1		
24		807292T	COOLER-Power Steering Oil Cooler	1		
25	54	47715	CLIP	1		
26	10	35765A	1 SCREW & LOCKWASHER (5/16-1	1		
.	27	811572A94	GASKET SET-Overhaul	1	(454)	
.	27	805396A92	GASKET SET-Overhaul	1	(502)	