



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		806235A	1 HOUSING ASSEMBLY-Thermostat	1		
2	22	32803	PLUG-Pipe (3/8)	2		
3	27	806871	GASKET-Thermostat	1		1,2
4	27	53045	1 GASKET-Thermostat Housing	1		1,2
5		807252	2 THERMOSTAT	1		
6	23	806922	SLEEVE	1		
7	10	98794	SCREW (3/8-16 x 1 in.)	2		
8	32	807407	HOSE-Thermostat Housing, to Engi	1		
9	32	808052	HOSE-Cooler to Cooler	1	(USE WITH 10 IN. ENGINE OIL C	
9	32	807406	HOSE-Cooler to Cooler	1	(USE WITH 13 IN. ENGINE OIL C	
10	32	807404	HOSE-P/S Oil Cooler to Sea Water	1		
11	32	17435	79 HOSE-Sea Water Pump to Drive U	1		
12	54	815504222	CLAMP	8		
13	32	89718	1 HOSE-Thermostat Housing to Wate	1		
14	54	815504232	CLAMP	2		
15	32	89749	1 HOSE	1	Thermostat Housing to Port Exhau	
16	32	807201	HOSE	1	Thermostat Housing to Starboard E	
17	54	815504220	CLAMP	4		
18	54	806616	CLAMP	1		
19		77054	STA-STRAP (14.50 in.)	1		
20		99356A	2 COOLER-Power Steering Oil	1		
21		807402T	BRACKET-Oil Cooler	1		
22		807445T	CLAMP	1		
23	12	35462	WASHER	1		
24	11	72008	NUT (.250-20)	1		
25	10	86750	SCREW (.312-18 x 5/8 in.)	1		
26	13	39107	LOCKWASHER (5/16 in.)	1		
-	27	811572A94	GASKET SET-Overhaul	1	(454)	
-	27	805396A92	GASKET SET-Overhaul	1	(502)	