



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12675A	7 HOUSING ASSEMBLY-Flywheel	1		
2		88791	1 MOUNT-Rubber-Flywheel Housin	2		
3	23	99322	2 SPACER-Rubber Mount-Flywheel	2		
4	10	37612	4 SCREW (.375-16 x 1.250)-Flywheel	4		
4	10	32132	1 SCREW (.375-16 x 1.750)-Flywheel	1		
5	16	64066	2 STUD (2.750 In.)-Flywheel Housing	2		
6	11	32219	2 NUT (.375-16)-Flywheel Housing At	2		
7	13	35048	8 LOCKWASHER (.375)-Flywheel Ho	8		
8	12	20572	1 WASHER-Special (.375)-Housing S	1		
9	54	78945	2 J CLAMP-Flywheel Housing Stud	2		
10		13930A	3 COVER KIT	1	(S/N: 0D456000 - 0D725505)	5
10		818719A	3 COVER KIT-With Gasket	1	(S/N: 0D725506 - 0F348963)	6
11	10	32773	7 SCREW (.250-20 x .875)-Cover to F	7		
12	84	62826A	6 CABLE ASSEMBLY (Black)	2		