



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	45	86978A 1	DRIVESHAFT ASSEMBLY (37.00)	1	
1	45	53967A1	DRIVESHAFT ASSEMBLY (43.00)	1	
2		61218	FLANGE-Driveshaft	1	
3		61221	UNIVERSAL JOINT	2	
4	22	74036	FITTING-Grease	2	
5		96276A 2	YOKE ASSEMBLY	1	
6		61218	FLANGE-Yoke	1	
7	10	68743	SCREW (.437-20 x 1.250)	4	
8	13	47659	LOCKWASHER (.437)	4	
9	11	34933	NUT (.437-20)	4	
10		52505A 1	SHAFT ASSEMBLY-Drive Extensio	1	
11	19	47464	PLUG	1	
12	23	47471	BEARING	1	
13	10	60106	SCREW (.437-20 x 1.250)	4	
14	12	45176	WASHER	4	
15		55434A 2	HOUSING ASSEMBLY-Driveshaft	1	
16	26	52499	SEAL-Oil	1	
17	22	36382	PLUG-Pipe (.250)	1	
18	22	32802	PLUG-Pipe (.125)	1	4
19	22	47902	FITTING	1	
20	15	49264A 1	SHIM SET	1	
21	30	47470	BEARING-Ball	1	
22	53	52502	RING-Snap	1	
23	27	52501	GASKET-Bearing Support Housing	1	
24		52506A 1	HOUSING ASSEMBLY-Bearing Suj	1	
25	31	47468	BEARING-Needle	1	
26	26	47465	SEAL-Oil	1	
27	53	52507	RING-Support	1	
28	53	52503	RING-Snap	1	
29	24	47755	SPRING	1	
30	10	32695	SCREW (.437-20 x 2.250)	4	
30	10	56393	SCREW (.437-20 x 1.750)	2	
30	10	32515	SCREW (.437-20 x 2.500)	2	
31	12	22248	WASHER	8	
32	11	35053	NUT (.437-20)	8	