



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	50	99418A2	STARTER ASSEMBLY	1	4
1		75666	HOUSING ASSEMBLY	1	
2	23	33369	BUSHING-Drive End Housing	1	
3		814474	COLLAR-- st	1	
4	53	33290	RING-Retaining-Pinion Stop Colla	1	
5		33291	COLLAR-Pinion Stop	1	
6		79205	DRIVE ASSEMBLY-Clutch	1	
7		79396	PLATE-Bearing	1	
8	23	71694	BUSHING-Bearing Plate	1	
9	12	68614	WASHER-Bearing Plate	1	
10	10	79209	SCREW-Bearing	2	
11		75665	ARMATURE	1	
12		NSS	SHOE-Pole-Field Coil (Delco Rem	4	1
13		NSS	SCREW (Delco Remy #1968396)	4	1
14		NSS	GROMMET-Field Coil (Delco Remy	1	1
15		75664	FIELD COIL ASSEMBLY	1	
16	12	33258	WASHER-Leather-Commutator E	1	
17		79211	FRAME-Commutator End	1	
18		NSS	BOLT-- (Delco Remy #1941111)	1	1
19		NSS	BOLT-- (Delco Remy #1939970)	1	1
20		33284	HOLDER-Insulated-Field Frame B	2	
21		33283	HOLDER-Field Frame Brush Grou	2	
22		33270	BRUSH-Field Frame	4	
23		NSS	SCREW-Brush Lead (Delco Remy	2	1
24		NSS	SCREW-Brush Lead (Delco Remy	2	1
25		33294	SUPPORT	2	
26	24	33285	SPRING-Field Frame Brush	4	
27		NSS	PIN-Dowel (Delco Remy #19856	1	1
28		71698	LEVER-Shift	1	
29		NSS	STUD-Shift Lever (Delco Remy #	1	1
30	53	33354	RING-Retaining-Stud	1	
31		33317	PLUNGER-Shift Lever	1	
32	17	79207	PIN-Plunger to Shift Lever	1	
33	24	46889	SPRING-Plunger Return	1	
		NSS	SCREW (Delco Remy #9413260)	2	1
	89	18080	SOLENOID	1	