



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		14746A	1 TRANSMISSION ASSEMBLY	1	
2	22	47629	ELBOW-Transmission to Oil Hose	2	
3	22	88517	ADAPTOR-Reducing-Transmissic	1	
4		47339A	4 COUPLING ASSEMBLY-Engine	1	
5	19	47463	PLUG-Expansion-Engine Coupli	1	
6	53	47469	RING-Snap-Ball Bearing to Eng	1	
7	23	47471	BEARING-Engine Coupling	1	
8	24	47755	SPRING-Guide-Engine Couplinx	1	
9	30	47470	BEARING-Ball	1	
10		47333A	1 HOUSING ASSEMBLY-Bearing S	1	
11	25	47756	O RING-Bearing Support Housin	1	
12	26	47465	SEAL-Oil-Bearing Support Hous	1	
13	31	47468	BEARING-Needle-Bearing Supr	1	
14	27	47903	GASKET-Bearing Support Housin	1	14
15	10	47462	SCREW (.437-14 x 1.250)	8	
16	13	32993	LOCKWASHER (.437)-Support H	8	
17		48461	ADAPTOR-Oil Level Gauge-Tube	1	
18	25	48462	O RING-Oil Level Tube Adaptor	1	
19		48463	TUBE-Oil Level Gauge	1	
20		48464	DIPSTICK-Oil Level	1	
21	25	35276	O RING-Oil Level Gauge	1	
22		48466	BRACKET-Mounting-Oil Level Gau	1	
23	10	32417	SCREW (.250-28 x .625)	2	
24	13	26992	LOCKWASHER (.250)-Mounting Br	2	
25		47340A	1 BRACKET ASSEMBLY-Transmissic	1	
26		35852	MOUNT-Transmission Mount Bra	1	
27	10	47462	SCREW (.437-14 x 1.250)-Bracket	2	
28	13	32993	LOCKWASHER (.437)-Mount Brack	2	
29	10	47467	SCREW (.625-18 x 5.500)-Tailstock	2	
30	12	47466	WASHER-Tailstock Screws (NEOF	4	
31	12	47475	WASHER-Tailstock Screws	2	
32	13	34846	LOCKWASHER-Tailstock Screws	2	
33	12	33171	WASHER-Tailstock Screws	2	
34	11	22339	NUT (.625-18)-Tailstock Screws	2	
35	87	88031	SWITCH-Temperature	1	
36	32	47516	6 HOSE ASSEMBLY (30.00 In.)-Tran	2	
37	10	60179	SCREW (.437-14 x 3.500)-Transmis	6	
38	13	32993	LOCKWASHER (.437)-Transmissio	6	
39		12128	LEVER-Shift-Transmission	1	
40	16	63335	STUD-Shift Lever	1	
41	12	28142	WASHER-Shift Lever Stud	1	