



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		13497A 3	DISTRIBUTOR ASSEMBLY	1	
2		16457A 4	CAP, DISTRIBUTOR	1	
3	10	90926	SCREW, DISTRIBUTOR CAP	4	
4	27	98242	GASKET, DISTRIBUTOR CAP	1	2
5		13524A 3	ROTOR	1	
6		42862	SENSOR WHEEL	1	
7	10	11252	SCREW, SENSOR WHEEL	3	
8	87	91019A 3	SENSOR ASSEMBLY	1	
9	10	66686	SCREW, SENSOR	1	
10	13	26996	LOCKWASHER, SENSOR SCRE	3	
11	43	813776 1	GEAR, DRIVE	1	
12	84	86322A17	CABLE ASSEMBLY (BLACK)	1	
13	10	72202	SCREW, CABLE	1	
14	11	68219	NUT, CABLE SCREW	1	
15	27	34486 1	GASKET, DISTRIBUTOR	1	2
16		52185	CLAMP, DISTRIBUTOR TO INTAK	1	
17	10	34353	SCREW, DISTRIBUTOR CLAMP	1	
18	13	35048	LOCKWASHER, CLAMP SCREW	1	
19	12	20553	WASHER, CLAMP SCREW	1	
21	13	26996	LOCKWASHER, DISTRIBUTOR T	1	
22	11	68219	NUT, DISTRIBUTOR TERMINAL	2	
23	12	30164	WASHER, DISTRIBUTOR TERMINAL	2	
24	84	813720A 2	SPARK PLUG WIRE KIT	1	
25	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	8	
26	33	59660	SPARK PLUG	8	
27		54676	RETAINER, HIGH TENSION LEAD	2	
28		32783	RETAINER, HIGH TENSION LEAD	2	
29		32784	RETAINER, HIGH TENSION LEAD	4	
30	392	7803A 4	COIL, IGNITION	1	
31		77294	BRACKET, IGNITION COIL	1	
32	10	41408	SCREW, BRACKET (1-1/2")	1	
33	13	26996	LOCKWASHER, IGNITION COIL T	2	
34	11	68219	NUT, IGNITION COIL TERMINAL	2	
35	10	86750	SCREW, IGNITION COIL (3/4")	2	
36	13	26993	LOCKWASHER, IGNITION COIL S	2	
37	12	20084	WASHER, IGNITION COIL SCREW	2	