



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	45	86978A 1	DRIVE SHAFT ASSEMBLY (37")	1		
1	45	53967A 1	DRIVE SHAFT ASSEMBLY (43")	1		
2		61218	FLANGE, DRIVE SHAFT	1		
3		61221	CROSS AND BEARING	2		
4	22	74036	GREASE FITTING	2		
5		96276A 2	YOKE ASSEMBLY	1		
6		61218	FLANGE, YOKE	1		
7	10	68743	SCREW	4		
8	13	47659	LOCKWASHER	4		
9	11	34933	NUT	4		
10		52505A 1	DRIVE SHAFT EXTENSION	1		
11	19	47463	PLUG	1		
12	23	47471	BEARING	1		
13	10	60106	SCREW	4		
14	12	45176	WASHER	4		
15		55434A 2	DRIVE SHAFT EXTENSION HOUSING	1		
16	26	52499	OIL SEAL	1		
17	22	36382	PIPE PLUG (1/4")	1		
18	22	32802	PIPE PLUG (1/8")	1		
19	22	47902	FITTING	1		
20	15	49264A 1	SHIM SET	1		
21	30	47470	BALL BEARING	1		
22	53	52502	SNAP RING	1		
23	27	52501	GASKET, BEARING SUPPORT HOUSING	1		
24		52506A 1	BEARING SUPPORT HOUSING	1		
25	31	47468	NEEDLE BEARING	1		
26	26	47465	OIL SEAL	1		
27	53	52507	RING, SUPPORT	1		
28	53	52503	SNAP RING	1		
29	24	47755	SPRING	1		
30	10	32695	SCREW	4		
30	10	56393	SCREW	2		
30	10	32515	SCREW	2		
31	12	22248	WASHER	8		
32	11	35053	NUT	8		