



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14746A	1 TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW, TRANSMISSION TO OIL	2		
3	22	88517	BUSHING, REDUCING - TRANS	1		
5		47339A	4 ENGINE COUPLING ASSEMBLY	1		
6	19	47463	PLUG, EXPANSION - ENGINE	1		
7	53	47469	RING, SNAP - BALL BEARING	1		
8	23	47471	BEARING, ENGINE COUPLING	1		
9	24	47755	SPRING, GUIDE - ENGINE CO	1		
10	30	47470	BALL BEARING, ENGINE COU	1	TO TRANSMISSION	
11		47333A	1 HOUSING ASSEMBLY, BEARING	1		
12	25	47756	"O" RING, BEARING SUPPORT	1		
13	26	47465	OIL SEAL, BEARING SUPPORT	1		
14	31	47468	ROLLER BEARING	1	BEARING SUPPORT HOUSING	
15	27	47903	GASKET, BEARING SUPPORT H	1		
16	10	47462	SCREW, BEARING SUPPORT H	8	TRANSMISSION (1-1/4")	
17	13	32993	LOCKWASHER, BEARING SUPP	8		
18		48461	ADAPTOR, OIL LEVEL GAUGE	1	TO TRANSMISSION	
19	25	48462	"O" RING, OIL LEVEL TUBE ADA	1		
20		48463	TUBE, OIL LEVEL GAUGE	1		
21		48464	GAUGE, OIL	1		
22	25	35276	"O" RING, OIL LEVEL GAUGE	1		
23		48466	BRACKET, MOUNTING - OIL LEV	1		
24	10	32417	SCREW, MOUNTING BRACKET T	2		
25	13	26992	LOCKWASHER, MOUNTING BRA	2		
26		47340A	1 BRACKET ASSEMBLY, TRANSMI	1	(PORT)	
27		35852	MOUNT, TRANSMISSION MOU	1		
28	10	47462	SCREW, MOUNT BRACKET TO T	2	(1-1/4")	
29	13	32993	LOCKWASHER, MOUNT BRACKE	2		
30	10	47467	SCREW, TAILSTOCK TO INNER	2	(5-1/2")	
31	12	47466	WASHER, TAILSTOCK SCREWS	4		
32	12	47475	WASHER, TAILSTOCK SCREWS	2		
33	13	34846	LOCKWASHER, TAILSTOCK SCR	2		
34	12	33171	WASHER, TAILSTOCK SCREWS	2		
35	11	22339	NUT, TAILSTOCK SCREWS	2		
36	87	88031	SWITCH, TEMPERATURE	1		
37	32	47516	6 HOSE, TRANSMISSION TO OIL C	2		
38	10	60179	SCREW, TRANSMISSION TO EN	6		
39	13	32993	LOCKWASHER, TRANSMISSION	6		
40		12128	LEVER, SHIFT - TRANSMISSI	1		
41	16	63335	STUD, SHIFT LEVER	1		
42	12	28142	WASHER, SHIFT LEVER STUD	1		