



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	50	37151	STARTER MOTOR ASSEMBLY, C	1	
1		37163	HOUSING, STARTER	1	
2	23	37162	BUSHING, STARTER HOUSING	1	
3	11	37172	NUT, DRIVE ASSEMBLY TO AR	1	
4	17	37173	PIN, ARMATURE NUT	1	
5		37160	DRIVE ASSEMBLY	1	
6	10	37159	BOLT SET, THRU-STARTER HC	1	
7		37174	FIELD COIL ASSEMBLY	1	
8		37152	BRUSH HOLDER PACKAGE (PC	1	
9		37156	ARMATURE	1	
10		37157	BRUSH HOLDER PACKAGE (NE	1	
11	23	37154	BUSHING, END PLATE	1	
12	12	37155	WASHER SET, ARMATURE	1	
13		37158	BRUSH SET, NEGATIVE AND P	1	
14	12	37161	WASHER, RETAINING-ARMATL	1	
15	25	37167	GROMMET, STARTER MOTOR	1	
16	10	37166	BOLT, STARTER FIELD COIL	4	
17	17	37171	PIN ASSEMBLY, ARM TO STAR	1	
18		37170	ARM ASSEMBLY, SOLENOID	1	
19	10	37169	SCREW KIT, SOLENOID ARM T	1	
20	10	37165	BOLT, THRU-STARTER SOLE	1	
21		37168	PLATE (PAIR), STARTER SOLE	1	
22		37164	SOLENOID ASSEMBLY, START	1	
23		37153	WASHER AND NUT REPLACEM	1	