



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	46	72774A32	PUMP ASSEMBLY-Sea Water	1	
2	46	72774A89	BODY/IMPELLER KIT-Sea Water	1	
3	27	805215	GASKET-Cover to Outer Wear	1	
4	27	94914	GASKET-Body to Wear Plate	2	
5	47	59362	IMPELLER (USE WITHOUT KE	1	
6	25	94288	RING-Quad-Pump Housing	1	
7		87631A	COVER ASSEMBLY-Sea Water F	1	
8	12	20084	WASHER-Cover Screw	5	
9	10	73275	SCREW (.312-18 x 2.875)-Sea W	5	
10		94916	WEAR PLATE-Outer	1	
11		94576	WEAR PLATE-Inner	1	
12	19	59504	PLUG-Impeller	1	
13	28	56662	KEY-Impeller Drive	1	
14	46	94913A	HOUSING ASSEMBLY-Sea Water	1	
15	26	90562	SEAL-Oil-Sea Water Pump Sha	2	
16	30	72961	BEARING-Ball-Sea Water Pump	2	
17		59501A	SHAFT-Sea Water Pump	1	
18	53	23720	RING-Retaining-Ball Bearing	1	
19	26	72785	SEAL-Oil-Sea Water Pump Sha	1	
20		47530	HUB-Sea Water Pump Pulley	1	
21		73798A	PULLEY-Sea Water Pump	1	
22	10	47277	SCREW (.312-24 x .750)-Pulley	4	
23	13	39107	LOCKWASHER (.312)-Pulley Screw	4	
24	22	32802	PLUG-Pipe (For Sea Water Pump B	1	1
25	57	74271T	V BELT-Sea Water Pump	1	
26		47489A	BRACKET KIT-Sea Water Pump	1	
27	10	34354	SCREW (.375-16 x 1.500)-Sea Wal	1	
28	13	35048	LOCKWASHER (.375)-Bracket Scr	1	
29	13	32993	LOCKWASHER (.437)-Bracket Scr	2	
30	12	27025	WASHER-Bracket Screw	1	
31	10	47462	SCREW (.437-14 x 1.00)-Sea Water	1	
32	10	48948	SCREW (.437-14 x .875)-Sea Water	1	
33	12	29330	WASHER (For Slot)	1	
34		64177	BRACE-Sea Water Pump	1	
35	10	47462	SCREW (.437-14 x 1.250)-Brace to	1	
36	13	32993	LOCKWASHER (.437)-Brace Screw	1	
37	10	35786	SCREW (.375-24 x 1.00)-Sea Water	1	
38	13	35048	LOCKWASHER (.375)-Brace Screw	1	
39	11	46335	NUT (.375-24)-Brace Screw	1	