



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	17251A 3	STARTER ASSEMBLY	1	(TRANSMISSION & DRIVELINE	1
1		79206	HOUSING ASSEMBLY	1		
2	23	33369	BUSHING-Drive End Housing	1		
3		814474	COLLAR-Thrust	1		
4	53	33290	RING-Retaining-Pinion Stop Colla	1		
5		33291	COLLAR-Pinion Stop	1		
6		68608	DRIVE ASSEMBLY-Clutch	1		
7		79396	PLATE-Bearing	1		
8	23	71694	BUSHING-Bearing Plate	1		
9	12	68614	WASHER-Bearing Plate	1		
10	10	79209	SCREW-Bearing	2		
11		68606	ARMATURE	1		
12		NSS	SHOE-Pole-Field Coil	4	(Delco Remy #810601)	6
13		NSS	SCREW	4	(Delco Remy #1968396)	6
14		NSS	GROMMET-Field Coil	1	(Delco Remy #1846097)	6
15		NSS	FIELD COIL ASSEMBLY	1	(Delco Remy #1970467)	6
16		NSS	WASHER-Leather	1	(Delco Remy #1985617)	6
17		79211	FRAME-Commutator End	1		
18		NSS	BOLT-Thru	1	(Delco Remy #1939970)	6
19		33284	HOLDER-Insulated-Field Frame B	2		
20		33283	HOLDER-Field Frame Brush Grou	2		
21		33270	BRUSH-Field Frame	4		
22		NSS	SCREW-Brush Lead	2	(Delco Remy #1967747)	6
22		NSS	SCREW-Brush Lead	2	(Delco Remy #443527)	6
23		33294	SUPPORT	2		
24	24	33285	SPRING-Field Frame Brush	4		
25		NSS	PIN-Dowel	1	(Delco Remy #1985696)	6
26		33297	LEVER-Shift	1		
27		NSS	STUD-Shift Lever	1	(Delco Remy #1814529)	6
28	12	68615	WASHER-Shift Lever Stud	1		
29	11	26484	NUT (.312-18)-Shift Lever Stud	1		
30		33317	PLUNGER	1		
31	17	79207	PIN-Plunger to Shift Lever	1		
32	24	46889	SPRING-Plunger Return	1		
33		NSS	SCREW-Solenoid	2	(Delco Remy #132255)	6
34	89	18080	SOLENOID	1		