



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	46	72774A32	WATER PUMP ASSEMBLY	1			
2	46	72774A40	BODY, WATER PUMP	1			
3		87631A 1	COVER, WATER PUMP	1			
4	10	63328	SCREW, WATER PUMP (3")	5			
5	12	20084	WASHER, COVER SCREW	5			
6	27	94915	GASKET, COVER TO OUTER W	1			
7		94916	WEAR PLATE, OUTER	1			
8	27	94914	GASKET, BODY TO WEAR PLA	2			
9	19	59504	PLUG, IMPELLER	1			
10	47	59362	IMPELLER ASSEMBLY	1			
11	28	56662	KEY, IMPELLER DRIVE	1			
12		94576	WEAR PLATE, INNER	1			
13	25	94288	QUAD RING, PUMP HOUSING	1			
14	46	94913A 1	PUMP HOUSING ASSEMBLY	1			
15	26	90562	OIL SEAL, WATER PUMP SH/	2			
16	30	72961	BALL BEARING, WATER PUM	2			
17		59501A 1	SHAFT, WATER PUMP	1			
18	53	23720	SNAP RING, BALL BEARING F	1			
19	26	72785	OIL SEAL, WATER PUMP SH/	1			
20		47530	HUB, WATER PUMP PULLEY	1			
21		73798A 1	PULLEY, WATER PUMP (STAMP	1			
22	10	47277	SCREW, PULLEY (3/4")	4			
23	13	39107	LOCKWASHER, PULLEY SCREW	4			
24	22	32802	PLUG, PIPE (FOR WATER PUM	1			
25	57	74271T	BELT, WATER PUMP (35")	1			
26		47489A 2	BRACKET ASSEMBLY, WATER P	1			
27	10	47461	SCREW, WATER PUMP BRACKE	1			
28	10	48948	SCREW, WATER PUMP BRACKE	1			
29	13	32993	LOCKWASHER, BRACKET SCREW	2			
30	12	27025	WASHER, BRACKET SCREW	1			
31	10	34354	SCREW, WATER PUMP BRACKE	1			
32	13	35048	LOCKWASHER, BRACKET SCREW	1			
33	12	79643	WASHER, WATER PUMP SCREW	1			
34		64177	BRACE, WATER PUMP	1			
35	10	47461	SCREW, BRACE TO ENGINE (1")	1			
36	13	32993	LOCKWASHER, BRACE SCREW	1			
37	12	30315	WASHER, BRACE SCREW	1			
38	10	35786	SCREW, WATER PUMP BRACE (1			
39	13	35048	LOCKWASHER, BRACE SCREW	1			
40	11	24883	NUT, BRACE SCREW	1			