



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99418A 2	STARTER MOTOR	1	12" STARTER MOTOR	
2	10	94435	SCREW, STARTER MOTOR (4-21)	2	12" STARTER MOTOR	
3		89057	BRACE, STARTER MOTOR	1	12" STARTER MOTOR	
4	12	29245	WASHER, STARTER MOTOR STI	2	12" STARTER MOTOR	
5	11	72008	NUT, BATTERY TERMINAL (1/4-2	1	12" STARTER MOTOR	
5	11	15874	NUT, BATTERY TERMINAL (10MP	1	12" STARTER MOTOR	
6	10	35765A 1	SCREW, BRACE TO ENGINE (5/8	1	12" STARTER MOTOR	
7	13	26995	LOCKWASHER, STARTER TERM	2	12" STARTER MOTOR	
8	11	26419	NUT, STARTER SWITCH TERMIN	1	12" STARTER MOTOR	
8	11	40021 1	NUT, STARTER SWITCH TERMIN	2	12" STARTER MOTOR	
1	50	812428A 3	STARTER MOTOR	1	8" STARTER MOTOR	
2	10	813642	SCREW, STARTER MOTOR	2	8" STARTER MOTOR	
5	11	15874	NUT, BATTERY TERMINAL (10MP	1	8" STARTER MOTOR	
8	11	40021 1	NUT, STARTER SWITCH TERMIN	2	8" STARTER MOTOR	
9	85	79695	BOOT, INSULATOR - STARTER T	1		
10		92497A 3	ALTERNATOR	1		
11	13	26996	LOCKWASHER, ALTERNATOR TI	1		
12	11	79989	NUT ALTERNATOR TERMINAL (1	1		
13	13	26992	LOCKWASHER, ALTERNATOR TI	1		
14	11	64015	NUT, ALTERNATOR TERMINAL (1		
15		85013T	BRACE, ALTERNATOR ADJUSTI	1		
16	10	47462	SCREW, ALTERNATOR BRACE	1		
17	13	32993	LOCKWASHER, ALTERNATOR BI	1		
18	12	31263	WASHER, ALTERNATOR BRACE	1		
19	10	29198	SCREW, ALTERNATOR BRACE (1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21		57908 11	TUBING, ALTERNATOR LEADS	2		
22	12	96457	WASHER, ALTERNATOR TERMIN	1		
23		96116A 1	BRACKET, ALTERNATOR	1		
24	10	37612	SCREW, ALTERNATOR BRACKE	1		
24	10	34354	SCREW, ALTERNATOR BRACKE	2		
25	13	35048	LOCKWASHER, ALTERNATOR BI	3		
26	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
27	12	20553	WASHER, ALTERNATOR BRACK	2		
28	23	33186	BUSHING, ALTERNATOR BRACK	1		
29	11	23161	NUT, ALTERNATOR BRACKET SI	1		