



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		12675A	FLYWHEEL HOUSING	1	
2		88791	MOUNT, RUBBER - FLYWHEEL	2	
3	23	99322	SPACER, RUBBER MOUNT - FL	2	
4	10	37612	SCREW, FLYWHEEL HOUSING A	4	
4	10	64900	SCREW, FLYWHEEL HOUSING A	1	
5	16	64066	STUD, FLYWHEEL HOUSING AT	1	
6	11	32219	NUT, FLYWHEEL HOUSING ATT	1	
7	13	35048	LOCKWASHER, FLYWHEEL HOU	7	
8	12	20572	WASHER, FLYWHEEL HOUSING	1	
9	54	78945	"J" CLAMP, FLYWHEEL HOUSING	1	
9	54	92850	CLAMP	2	
10		13930A	COVER ASSEMBLY (USE WITH 1	1	
10		812600A	COVER ASSEMBLY (USE WITH 8	1	
11	27	96274	GASKET, FLYWHEEL HOUSING	1	2
12	10	32773	SCREW, COVER TO FLYWHEEL H	7	
13	84	62826A	WIRE, FLYWHEEL HOUSING STL	1	