



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		861006A 1	HOUSING ASSEMBLY-THERMOS	1		
2	22	32803	PLUG-PIPE (3/8 IN.)	2		
3	27	806871	GASKET-THERMOSTAT	1		4
4	27	53045 1	GASKET-THERMOSTAT HOUSIN	1		4
5		807252T 2	THERMOSTAT	1		
6	23	806922	SLEEVE	1		
7	10	35787	SCREW (3/8-16 X 2-1/4 IN.)	2		
8	32	807407 2	HOSE-THERMOSTAT HOUSING	1		1
9	32	807989	HOSE-COOLER TO COOLER	1		
10	32	808045	HOSE-FUEL COOLER TO POWEF	1		
11	32	808044	HOSE-POWER STEERING OIL CC	1		
12	32	17435 79	HOSE-SEA WATER PUMP TO TR	1		
13	54	815504222	CLAMP	10		
14	32	861183	HOSE-THERMOSTAT HOUSING	1		1
15	54	815504232	CLAMP	2		
16	32	89749 1	HOSE-THERMOSTAT HOUSING	1		
17	32	861318	HOSE-THERMOSTAT HOUSING	1		
18	54	815504216	CLAMP	4		
19		805546A 2	BRACKET-POWER STEERING OI	1		
20		77223 3	PAD	1		
21	54	815504232	CLAMP	1		
22	10	816585	SCREW (5/16-18 X 7/8)	1		
23	12	20572	WASHER	1		
24		861554T	COOLER-POWER STEERING OIL	1		
25	54	47715	CLIP	1		
26	10	35765A 1	SCREW & LOCKWASHER (5/16-1	1		
27		12552	LIFTING EYE	1		
NS	19	807992 3	COVER-HOSE CLAMP END	AR		3
.	27	802567A98	GASKET SET-ENGINE OVERHAU	1		