



- | | |
|---|---|
| <ul style="list-style-type: none"> 1 - Fuel Pump 2 - Throttle Body 3 - Distributor 4 - Coil 5 - Electronic Spark Control (KS) Module 6 - Data Link Connector (DLC) 7 - Manifold Absolute Pressure (MAP) Sensor 8 - Knock Sensor (Port and Starboard) 9 - Idle Air Control (IAC) 10- Throttle Position (TP) Sensor | <ul style="list-style-type: none"> 11- Engine Coolant Temperature (ECT) Sensor 12- Electronic Control Module (ECM) 13- Fuel Pump Relay 14- Ignition/System Relay 15- Fuse (15 Amp) Fuel Pump
Fuse (15 Amp) ECM/DLC/Battery
Fuse (10 Amp) ECM/Injector/Ignition/Knock Module 16- Harness Connector To Starting/Charging Harness 17- Positive (+) Power Wire To Engine Circuit Breaker 18- Intake Air Temperature (IAT) Sensor 19- Gear Lube Bottle - Audio Warning Switch 20- Oil Pressure - Audio Warning Switch 21- |
|---|---|

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861092A 1	WIRING HARNESS-ENGINE EFI	1		
-	84	861158T 2	WIRING HARNESS-ENGINE EFI	1	S/N: 0L086001 AND UP (MEFI-3)	