



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A27	DISTRIBUTOR ASSEMBLY	1	(Ignition Module Mounted On Exha	
1		805185A26	DISTRIBUTOR ASSEMBLY	1	(Ignition Module Mounted On Distr	
2		805759A 2	C&P	1		
3	10	90926	SCREW	4		
4	27	805760	GASKET	1		
5		13524A 5	ROTOR/SENSOR WHEEL	1		
6	87	91019A 3	SENSOR ASSEMBLY	1	(Ignition Module Mounted On Exha	
7	13	26996	LOCKWASHER	2	(Ignition Module Mounted On Exha	
8	11	68219	NUT	2	(Ignition Module Mounted On Exha	
9	87	91019A 6	SENSOR ASSEMBLY	1	(Ignition Module Mounted On Distr	
10	10	66686	SCREW (1")	1		
10	10	72202	SCREW (1-1/4")	1		
11	43	818807	DRIVE GEAR	1		
12	17	47617	PIN	1		
13	23	90915	BUSHLNG	2		
14	27	34486 3	GASKET	1		2
15		52185	CLAMP	1		
16	10	806681	SCREW	1		
17	84	816608A61	SPARK PLUG WIRE KIT	1		
18	33	59571	SPARK PLUG	8		
19		54676	RETAINER (2 WIRE)	2		
20		32783	RETAINER (3 WIRE)	2		
21	392	805570A 2	IGNITION COIL	1		
22		77294T	BRACKET	1	(Ignition Module Mounted On Exha	
22		65970T 1	BRACKET	1	(Ignition Module Mounted On Distr	
23	10	41408	SCREW (1-1/2")	1		
24	13	26996	LOCKWASHER	2		
25	11	68219	NUT	2		
26	10	59645	SCREW (5/16-18 X 3/4")	2	(Ignition Module Mounted On Exha	
26	10	92913	SCREW (7/16-14 X 3/4")	2	(Ignition Module Mounted On Distr	
28	16	90096A 1	STUD ASSEMBLY	2		
29	54	72821	RETAINER	2		
30	10	98260	SCREW	2		
31	13	35048	LOCKWASHER	2		