



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		<a href="#">18900A 1</a>	TRANSMISSION ASSEMBLY (1.5:	1		
-		<a href="#">18901A 1</a>	TRANSMISSION ASSEMBLY (2.0:	1		
-		<a href="#">18902A 1</a>	TRANSMISSION ASSEMBLY (2.5:	1		
1		813278	HOUSING	1		
2		813279	COVER	1		
3		813280	VENT CAP	1		
4	13	813281	LOCKWASHER	12		
5	10	813282	SCREW	5		
6	10	813283	SCREW	1		
7	10	813284	SCREW	4		
8	10	813285	SCREW	2		
9	26	813286	OIL SEAL	1		
10	10	813287	SCREW	4		
11		813288	RETAINING PLATE	1		
12	32	813289	HOSE	1		
13		813290	BAFFLE PLATE	1		
14	17	813291	DOWEL PIN	2		
15	26	813292	OIL SEAL	1		
16	13	813293	LOCKWASHER	7		
17	10	813294	SCREW	7		
18		813295	CONTROL BLOCK	1		
19	10	813296	SCREW	1		
20	12	813297	WASHER	1		
21		813298	SHIFT LEVER	1		
22	11	813299	NUT	1		
23	87	813300	NEUTRAL SAFETY SWITCH	1		
24	27	813301	GASKET	1		
25	22	813302	PLUG	1		
26	12	813303	WASHER	1		
27	36	811940	COVER KIT (INCLUDES REF. #2	1		
28	35	815419	FLUID FILTER KIT	1		
29	25	813407	O-RING	1		
30	25	813406	O-RING	1		
31		813305	DIPSTICK	1		
-		<a href="#">18900A 1</a>	TRANSMISSION ASSEMBLY (1.5:	1		
-		<a href="#">18901A 1</a>	TRANSMISSION ASSEMBLY (2.0:	1		
-		<a href="#">18902A 1</a>	TRANSMISSION ASSEMBLY (2.5:	1		
32		813306	INPUT SHAFT	1		
33	31	813307	ROLLER BEARING	4		
34	43	813308	GEAR	1		
35	12	813309	WASHER	2		