



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A69	PUMP ASSEMBLY-SEAWATER	1		
2	46	72774A40	BODY-WATER PUMP	1		
3		87631A 4	COVER-WATER PUMP	1		
4	27	805215 1	GASKET-COVER TO OUTER	1		
5	10	99347	SCREW (5/16-18 X 3-3/4 IN.)	5		
6	12	20084	WASHER	5		
7		94916	WEAR PLATE (OUTER)	1		
8	27	94914	GASKET-BODY TO WEAR PLAT	2		
9	47	59362 1	IMPELLER	1		
10		94576	WEAR PLATE (INNER)	1		
11	25	94288	QUAD RING	1		
12		818367A 1	HOUSING ASSEMBLY-WATER I	1		
13	26	90562	SEAL-OIL	2		
14		818366A 1	SHAFT ASSEMBLY-WATER P	1		
15		818745A 1	RING-SLIP	1		
16	12	89664	WASHER	1		
17	30	72961	BEARING-BALL (WATER PUM	2		
18	53	23720	RING-RETAINING	1		
19	26	806930	SEAL-OIL	1		
20		818365T	PULLEY	1		
21	10	79953A 2	SCREW KIT-DRAIN	1		
22	12	19183	WASHER-SEAL	1		
23	13	39107	LOCKWASHER (5/16 IN.)	1		
24	11	21908	NUT (5/16-18)	1		
25		818368T 1	BRACKET-SEAWATER PUMP	1		
26		818379T	BRACKET-IDLER	1		
27	10	76926	SCREW (3/8-16 X 7/8 IN.)	2		
28	13	35048	LOCKWASHER (3/8 IN.)	2		
29	10	17965	SCREW (7/16-14 X 3/4 IN.)	1		
30	43	818381 2	STUD-PINION	1		
31		818380	BUSHING-IDLER PULLEY	1		
32		818382	PULLEY-IDLER	1		
33	11	817618	NUT-(7/16-20)	1		
34	57	69143T	V-BELT	1		
35	16	806591	STUD	1		
36	13	32993	LOCKWASHER (7/16 IN.)	1		
37	11	22024	NUT (7/16-14)	1		
38	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	1		
39	13	32993	LOCKWASHER (7/16 IN.)	1		