



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66418T	BRACKET (FRONT)	2		
2	10	68101	SCREW (1-3/8")	6		
3	13	35048	LOCKWASHER	6		
4	10	57357	SCREW	2		
5	13	32993	LOCKWASHER	2		
6	11	29553	NUT	2		
7		66166A 4	TRUNNION	2		
8	13	68102	LOCKWASHER	2		
9		66284A 2	BASE-engine end (FRONT)	2		
10	11	20739	JAM NUT	4		
11	14	66658	T&B WASHER	2		
12	11	20739	NUT	2		
13		805496T	BRACKET (PORT)	1		
13		805496T 1	BRACKET (STARBOARD)	1		
14	10	40097 60	SCREW	4		
15	10	57357	SCREW	2		
16	13	32993	LOCKWASHER	2		
17	11	29553	NUT	2		
18		66166A 4	TRUNNION	2		
19	13	68102	LOCKWASHER	2		
20		816326A 2	BASE-TRANSMISSION END (REA	2		
21	11	816331	JAM NUT	2		
22	14	66658	T&B WASHER	2		
23	11	20739	NUT	2		