



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	808011A 1	STARTER MOTOR	1	(SEE "STARTER MOTOR" FOR E	
2	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	2		
3	13	32993	LOCKWASHER (7/16 IN.)	3		
4	11	40021 1	NUT (M5 X 0.8)	1		
5	11	15874	NUT (M10 X 1.5)	1		
6	13	26996	LOCKWASHER (#10)	1		
7	85	79695	BOOT-INSULATOR	1		
8	88	79023A91	FUSE ASSEMBLY (90 AMP)	1		
9	11	21825	NUT (1/4-28)	1		
10		805884T	ALTERNATOR ASSEMBLY	1	(SEE "ALTERNATOR (MANDO)"	
11		85013T	BRACE-ALTERNATOR ADJUSTIN	1		
12	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	1		
13	13	32993	LOCKWASHER (7/16 IN.)	1		
14	12	31263	WASHER	1		
15	10	29198	SCREW & LOCKWASHER (5/16-1	1		
16	12	26168	WASHER	1		
17	32	73815 67	TUBING-ALTERNATOR LEAD	2		
18		806394T	BRACKET-ALTERNATOR	1		
19	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	1		
19	10	91903	SCREW (7/16-14 X 1-3/4 IN.)	2		
20	12	22248	WASHER	2		
21	23	90520 1	SPACER	2		
22	10	48308	SCREW (3/8-24 X 3-3/4 IN.)	1		
23	12	20553	WASHER	2		
24	23	33186	BUSHING	1		
25	11	23161	NUT (3/8-24)	1		
26	12	96457	WASHER-PHENOLIC	1		
27	13	26996	LOCKWASHER (#10)	1		
28	11	79989	NUT (#10-24)	1		
29	13	26992	LOCKWASHER (1/4 IN.)	1		
30	11	94330	NUT (1/4-20)	1		