


THERMOSTAT HOUSING (STANDARD COOLING)

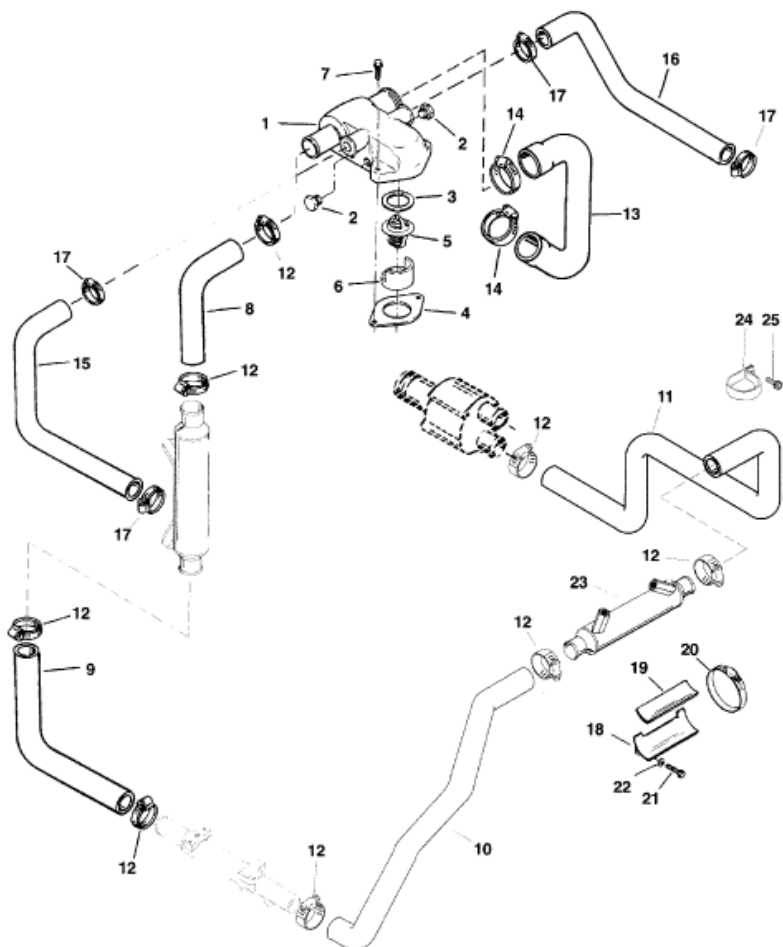

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		806235A	1 HOUSING ASSEMBLY-THERMOS	1		
2	22	32803	PLUG-PIPE (3/8 IN.)	2		
3	27	806871	GASKET-THERMOSTAT	1		4
4	27	53045	1 GASKET-THERMOSTAT HOUSIN	1		4
5		807252	2 THERMOSTAT	1		
6	23	860377	SLEEVE	1		
7		98794	SCREW (3/8-16 X 1 IN.)	2		
8	32	807407	1 HOSE-THERMOSTAT HOUSING.	1		
9	32	807989	HOSE-ENGINE OIL COOLER TO F	1		
10	32	808045	HOSE-FUEL COOLER TO TRANSI	1		
11	32	808044	HOSE-TRANSMISSION OIL COOL	1		
12	54	815504222	CLAMP	8		
13	32	89718	1 HOSE-THERMOSTAT HOUSING	1		
14	54	815504232	CLAMP	2		
15	32	97385	3 HOSE-THERMOSTAT HOUSING	1	(PORT)	
16	32	807201	HOSE-THERMOSTAT HOUSING	1	(STARBOARD)	
17	54	815504220	CLAMP	4		
18		805546A	2 BRACKET-TRANSMISSION OIL CI	1		
19		77223	3 PAD	1		
20	54	815504232	CLAMP	1		
21	10	37612	SCREW (3/8-16 X 1-1/4 IN.)	1		
22	13	35048	LOCKWASHER (3/8 IN.)	1		
23		807996T	COOLER-TRANSMISSION OIL CO	1		
24	54	47715	CLIP	1		
25	10	35765A	1 SCREW & LOCKWASHER (5/16-1	1		
-	27	806640A96	GASKET SET-OVERHAUL	1		