



Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|-----------|-----------------------------|-----|--------------------------------|----------|
| 1 | | 807323A 5 | BOX-Electrical Components | 1 | | |
| 2 | | 806762A 1 | VELCRO KIT | 1 | | |
| 3 | | 805443T | MODULE ASSEMBLY-Spark Contr | 1 | | |
| 4 | 11 | 64015 | NUT (1/4-20) | 1 | | |
| 5 | 89 | 96054 | SOLENOID ASSEMBLY-Starter | 1 | | |
| 6 | 13 | 26395 | LOCKWASHER (#8) | 2 | | |
| 7 | 11 | 26419 | NUT (#8-32) | 2 | | |
| 8 | 13 | 26392 | LOCKWASHER (1/4) | 2 | | |
| 9 | 11 | 94330 | NUT (1/4-20) | 2 | | |
| 10 | 12 | 35462 | WASHER | 2 | | |
| 11 | 11 | 64015 | NUT (1/4-20) | 2 | | |
| 12 | 85 | 97861 | INSULATOR-Starter Solenoid | 1 | | |
| 13 | 88 | 11178 | BREAKER-Circuit (50 amp) | 1 | | |
| 14 | 10 | 45862 | SCREW (#10-32 x 7/8 in.) | 2 | | |
| 15 | 11 | 61356 | NUT (#10-32) | 2 | | |
| 16 | 13 | 26396 | LOCKWASHER (#10) | 2 | | |
| 17 | 11 | 68219 | NUT (#10-32) | 2 | | |
| 18 | | 805615A 2 | SCREW ASSEMBLY-Thumb | 1 | | |
| 19 | | 92152 | SPACER | 3 | | |
| 20 | 12 | 35462 | WASHER | 3 | | |
| 21 | 11 | 64015 | NUT (1/4-20) | 3 | | |
| 22 | | 807268T 3 | MODULE-ECM | 1 | (VST FUEL SYSTEM) (S/N 0K14 17 | |
| 22 | | 860251T 1 | MODULE-ECM | 1 | (FUEL COOLED SYSTEM) (S/N 0 | |
| 23 | 10 | 76596 | SCREW (1/4-20 x 1-1/4 in.) | 4 | | |
| 24 | 12 | 20533 | WASHER | 4 | | |
| 25 | 11 | 805562 | NUT (#10-24) | 3 | | |
| 26 | | 805704 | FUSE (15 Amp) | 1 | | |
| 26 | | 805703 | FUSE (10 Amp) | 1 | | |
| 27 | | 805439T 3 | LID-Electrical Box | 1 | | |
| 28 | | 42600A 3 | CONTROLLER-Mercathode | 1 | | |
| 29 | 12 | 56681 | WASHER | 2 | | |
| 30 | 11 | 805562 | NUT (#10-24) | 2 | | |
| 31 | 11 | 68219 | NUT (#10-32) | 4 | | |
| 32 | 10 | 62568 | SCREW | 1 | | |
| 33 | | 807057 | RELAY-Fuel Pump | 1 | | |
| 33 | | 807057 | RELAY-Ignition System | 1 | | |