



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	806964A 3	STARTER MOTOR ASSEMBLY	1	(SEE "STARTER MOTOR" FOR E	
2	10	805343 2	SCREW (3/8-16 X 4-3/8 IN.)	2		
3	11	806949	NUT (M8 X 1.5)	1		
4	11	40021 1	NUT (M5 X 0.8)	1		
5	13	39107	LOCKWASHER (5/16 IN.)	1		
6	13	26996	LOCKWASHER (#10)	1		
7	85	79695	BOOT-INSULATOR	1		
8	88	79023A91	FUSE ASSEMBLY (90 AMP)	1		
9	11	21825	NUT (1/4-28)	1		
10		85013T	BRACE-ALTERNATOR ADJUSTIN	1		
11	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	1		
12	13	32993	LOCKWASHER (7/16 IN.)	1		
13	12	31263	WASHER	1		
14	10	29198	SCREW & LOCKWASHER (5/16-1	1		
15	12	26168	WASHER	1		
16		806394A 1	BRACKET-ALTERNATOR & POWE	1		
17	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	1		
17	10	91903	SCREW (7/16-14 X 1-3/4 IN.)	2		
18	12	22248	WASHER	3		
19	10	48308	SCREW (3/8-24 X 3-3/4 IN.)	1		
20	12	20553	WASHER	2		
21	23	33186	BUSHING	1		
22	11	23161	NUT (3/8-24)	1		
23		805884T	ALTERNATOR ASSEMBLY	1	(SEE "ALTERNATOR (MANDO)"	
24	12	96457	WASHER-PHENOLIC	1		
25	13	26996	LOCKWASHER (#10)	1		
26	11	79989	NUT (#10-24)	1		
27	13	26992	LOCKWASHER (1/4 IN.)	1		
28	11	94330	NUT (1/4-20)	1		