



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		18903T	BRACKET (REAR)	2		
2	10	806195	SCREW	8		
3	13	38829	LOCKWASHER	8		
4	10	57357	SCREW (2-1/4")	4		
5	13	32993	LOCKWASHER	4		
7	11	29553	NUT	4		
8		66418T	BRACKET (FRONT)	2		
9	10	68101	SCREW (1-3/8")	6		
10	13	35048	LOCKWASHER	6		
11	10	57357	SCREW	2		
12	13	32993	LOCKWASHER	2		
13	11	29553	NUT	2		
14		66166A 4	TRUNNION	4		
15	13	68102	LOCKWASHER	4		
16		66284A 2	BASE-ENGINE END (FRONT)	2		
17	11	20739	JAM NUT	4		
18	14	66658	TAB WASHER	2		
19		816326A 2	BASE-TRANSMISSION END (REA	2		
20	11	816331	JAM NUT	2		
21	14	66658	TAB WASHER	2		
22	11	20739	NUT	4		