



- 1-Fuel Pump
- 2-Distributor
- 3-Coil
- 4-Knock Sensor (KS) Module
- 5-Data Link Connector (DLC)
- 6-Manifold Absolute Pressure (MAP) Sensor
- 7-Idle Air Control (IAC)
- 8-Throttle Position (TP) Sensor
- 9-Engine Coolant Temperature (ECT) Sensor
- 10-Electronic Control Module (ECM)
- 11-Fuel Pump Relay
- 12-Ignition/System Relay
- 13-Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/  
Battery, (10 Amp) ECM/Injector/Ignition/Knock Module
- 14-Harness Connector To Starting/Charging Harness
- 15-Positive (+) Power Wire To Engine Circuit Breaker
- 16-Oil Pressure (Audio Warning System)
- 17-Load Anticipation Circuit (Not Used On MCM)
- 18-Water Temperature Sender
- 19-Gear Lube Bottle (Not used on Inboard models)
- 20-Manifold Air Temperature (MAT) Sensor

- BLK - BLACK
- BLU - BLUE
- BRN - BROWN
- GRY - GRAY
- GRN - GREEN
- ORN - ORANGE
- PNK - PINK
- PUR - PURPLE
- RED - RED
- TAN - TAN
- WHT - WHITE
- YEL - YELLOW
- LIT - LIGHT
- DRK - DARK

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861162T 1	WIRING HARNESS	1		
-	84	861718T 1	HARNESS	1		