



20152

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		807400A 1	HEAT EXCHANGER	1		
NS		814875	COVER, Heat Exchanger End	2		
NS	27	803644	GASKET	2		
NS	10	814877	BOLT	2		
NS	25	814878	O-RING, (Special)	2		
NS	36	814879 1	CAP	1		
2		860092A 1	BRACKET ASSEMBLY-HEAT EXC	1		
3		18431	PAD	2		
4	10	91903	SCREW, (.437-14 x 1.750)	1		
4	10	47462	SCREW, (.437-14 x 1.250)	1		
5	12	31263	WASHER	4		
6	23	90520 1	SPACER, (.75 Outside Diameter X.	2		
7	54	815504388	CLAMP, Worm Gear	2		
8		71587A10	COOLANT RECOVERY KIT	1	(Coolant Recovery System is sold .	
9		71587A11	BOTTLE	1		
10		72058	CAP	1		
11		861188A 1	HOUSING, Thermostat	1		
12	25	807134 1	SEAL	1		4
13	23	52020	SLEEVE, Hose	1		
14	22	32803	PLUG, Pipe (.375-18 Brass)	1		
15		99155 1	THERMOSTAT	1		
16		807075A 1	COVER	1		
17	10	29198	SCREW AND LOCKWASHER, (.31	2		
18	10	98794	SCREW, (.375-16 x 1.00)	2		
19	22	32802 2	PLUG, Pipe (.125-27) Brass	1		
20	27	53045 1	GASKET	1		4
21	32	807271	HOSE	1		
22	32	861306	HOSE-HEAT EXCHANGER TO ST	1		
23	32	807141	HOSE	1		
24	54	815504520	CLAMP, Worm Gear	6		
25	32	807137	HOSE, Thermostat Housing To Hez	1		
26	54	815504522	CLAMP, Worm Gear	2		
27	32	805138	HOSE, Water Pump To Heat Exch	1		
28	54	815504528	CLAMP, Worm Gear	2		
29	32	99520	HOSE-HEAT EXCHANGER TO HE	1		
30	54	815504512	CLAMP, Worm Gear	2		
31	32	807406	HOSE	1		
32	32	807989	HOSE-COOLER TO COOLER	1		
33	32	808045	HOSE, Fuel Cooler to Transmission	1		
34	32	861411	HOSE-TRANSMISSION OIL COOL	1		
35	32	807694 40	HOSE, (.400 Inside Dia)	1		