



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46619	DISTRIBUTOR ASSEMBLY, COMF	1		
2		46630	CAP ASSEMBLY, DISTRIBUTOR	1		
3		46631	BALL AND SPRING ASSEMBLY	1		
4		46632	ROTOR, DISTRIBUTOR	1		
5	12	46967	WASHER, FELT-DISTRIBUTOR	1		
6		46969	SHIELD, BREAKER ASSEMBLY	1		
7		46635	BREAKER ASSEMBLY, DISTRIE	1		
8	112	46634	BREAKER ASSEMBLY, DISTRIE	1		
9	18	46633	BREAKER ASSEMBLY, DISTRIE	1		
10	10	46636	SCREW, BREAKER ASSEMBLY	1		
10		46637	BASE, BREAKER ASSEMBLY	1		
11		46968	PLATE, MOUNTING-BREAKER	1		
12	24	46638	SPRING, TENSION-WIPER	1		
13		46639	WIPER, DISTRIBUTOR ROTOR	1		
14	24	46620	SPRING, CAM BREAKER ADVAI	1		
15	24	46621	SPRING, CAM BREAKER ADVAI	1		
16		46626	CONDENSER	1		
17	10	46629	SCREW, CONDENSER TO DIST	1		
18	13	46627	LOCKWASHER, CONDENSER E	1		
19	13	46628	LOCKWASHER, CONDENSER E	1		
20		46625	RETAINER KIT, DISTRIBUTOR	1		
21	10	46622	SCREW, PRIMARY TERMINAL	1		
22	17	46623	PIN, DRIVE-MAIN SHAFT	1		
23	24	46624	SPRING, MAIN SHAFT	1		
24		38542	LEAD ASSEMBLY, COIL TO DIST	1		
25		38547	COIL ASSEMBLY, IGNITION	1		
26	54	33271	CLAMP, LOCK-COIL TERMINAL	2		
27	13	26996	LOCKWASHER, COIL TERMINA	2		
28	11	33277	NUT, COIL TERMINAL	2		
29		46686	BRACKET, COIL MOUNTING	1		
30	10	46533	SCREW, COIL MOUNTING BRAC	2		
31	12	37175	LOCKWASHER, COIL MOUNTING	2		
32	54	38537	CLIP, WIRING HARNESS- COIL M	1		
33		37036	CLAMP, DISTRIBUTOR TO CYLIN	1		
34	16	46566	STUD, DISTRIBUTOR CLAMP TO	1		
35	12	37175	WASHER, DISTRIBUTOR CLAMP	1		
36	11	46571	NUT, DISTRIBUTOR CLAMP STU	1		
37	27	37058	GASKET, DISTRIBUTOR	1		
38		46010A	LEAD ASSEMBLY, HIGH TENSIO	4		
39		47604A	PROTECTOR, HIGH TENSION L	4		
40	22	46625	SPARK PLUG (AC 1452)	4		