



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45658	HOUSING, FLYWHEEL	1		
2		38185	MOUNT, RUBBER - FLYWHEEL F	2		
3	10	21722	SCREW, MOUNT TO FLYWHEEL	8		
4	13	26992	LOCKWASHER, MOUNT SCREW	8		
5		45625	COVER, FLYWHEEL HOUSING	1		
6	10	20776	SCREW, FLYWHEEL COVER TO I	3		
7	13	26992	LOCKWASHER, FLYWHEEL COVI	3		
8	17	29967	PIN, TIMING - FLYWHEEL HOUSI	1		
9	10	32515	SCREW, FLYWHEEL HOUSING T	2		
9	10	37388	SCREW, FLYWHEEL HOUSING T	1		
9	10	46197	SCREW, FLYWHEEL HOUSING T	2		
9	10	46964	SCREW, FLYWHEEL HOUSING T	1		
10	12	32648	WASHER, FLYWHEEL HOUSING	10		
11	11	46138	NUT, FLYWHEEL HOUSING SCRI	2		
11	11	33962	NUT, FLYWHEEL HOUSING SCRI	4		
12		45618	HOUSING, FRONT MOUNT	1		
13	16	45642	STUD, FRONT/REAR MOUNT HC	3		
14	16	45641	STUD, FRONT/REAR MOUNT HC	3		
15	11	35814	NUT, FRONT AND REAR MOUNT	6		
16		46117	CARRIER, RUBBER MOUNT	1		
17	23	38307	SLEEVE, RUBBER - MOUNT CAR	1		
18	23	38308	SLEEVE, RUBBER - MOUNT CAR	1		
19		45619	HOUSING, REAR MOUNT	1		
20		38185	MOUNT, RUBBER - REAR MOUN	2		
21	10	22960	SCREW, RUBBER MOUNT TO M	4		
22	10	20776	SCREW, RUBBER MOUNT TO RE	4		
23	12	28426	WASHER, RUBBER MOUNT SCR	4		
24	10	26132	SCREW, REAR MOUNT HOUSIN	2		
25	12	30283	WASHER, REAR MOUNT HOUSIN	2		
26	10	33008	SCREW, REAR MOUNT HOUSIN	3		
27	11	21528	NUT, REAR MOUNT HOUSING SI	3		