



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	32	46135	FUEL LINE, INLET - FUEL TANK T	1			
2		46666A	FUEL PUMP ASSEMBLY	1			
3	22	46941	FITTING, FUEL PUMP INLET ANC	2			
4		46669	CLAMP ASSEMBLY, FUEL PUMP	1			
5	10	46670	SCREW, CLAMP TO FUEL PU	1			
6		46671	CAP, FUEL PUMP FILTER	1			
7	24	46673	SPRING, TENSION-FUEL PUMP	1			
8		46674	FILTER, FUEL PUMP	1			
9	10	46675	SCREW, FUEL PUMP CLAMPIN	8			
10	10	46678	SCREW, CHECK VALUE PLATE	3			
11		46668	ARM, FUEL PUMP	1			
12	10	46676	SCREW, ARM TO FUEL PUMP	1			
13	27	46667	REPAIR KIT, FUEL PUMP	1			
14	27	46677	GASKET, CHECK VALUE PLA	1			
15	27	46672	GASKET, FUEL FUEL PUMP F	1			
16	16	46522	STUD, FUEL PUMP TO CYLINDE	2			
17		46520	PLATE, MOUNTING- FUEL PUMP	1			
18	27	46521	GASKET, FUEL PUMP MOUNTING	1			
19	10	46517	SCREW, FUEL PUMP MOUNTING	1			
20	13	46523	LOCKWASHER, FUEL PUMP MOL	1			
21	27	37137	GASKET, FUEL PUMP	1			
22	12	46680	WASHER, FUEL PUMP STUD	2			
23	11	37140	NUT, FUEL PUMP STUD	2			
24	11	46679	NUT, LOCKING - FUEL PUMP STL	2			
25	32	46135	FUEL LINE, FUEL PUMP TO CARB	1			
26	1346	2770	CARBURETOR ASSEMBLY	1	SEE C10 FOR PARTS BREAKDO		
27	27	45865	GASKET, CARBURETOR	1			
28	16	32908	STUD, CARBURETOR TO INTAKE	1			
29	11	23161	NUT, CARBURETOR STUD	1			
30	10	34354	SCREW, CARBURETOR TO INTA	1			
31		46130	LEVER, THROTTLE	1			
32	16	21553	STUD, THROTTLE LEVER TO EX	1			
33	12	26825	WASHER, THROTTLE LEVER ST	2			
34	23	31831	SLEEVE, THROTTLE LEVER STU	1			
35	11	20102	NUT, THROTTLE LEVER STUD	1			
36	24	33453	SPRING, THROTTLE RETURN- T	1			
37	12	30164	WASHER, THROTTLE CABLE TO	1			
38	11	20110	NUT, THROTTLE CABLE TO THR	1			
39		27947	SWIVEL, LINK ROD TO THROTTL	1			
40		46127	LINK ROD, THROTTLE LEVER SV	1			
41		22282	SLEEVE, ADJUSTING LINK ROD	1			