



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	32	46135	FUEL LINE, INLET - FUEL TANK T	1		
2		46666A	FUEL PUMP ASSEMBLY	1		
3	22	46941	FITTING, FUEL PUMP INLET AN	2		
4		46669	CLAMP ASSEMBLY, FUEL PUMI	1		
5	10	46670	SCREW, CLAMP TO FUEL PUM	1		
6		46671	CAP, FUEL PUMP FILTER	1		
7	24	46673	SPRING, TENSION - FUEL PUM	1		
8		46674	FILTER, FUEL PUMP	1		
9	10	46675	SCREW, FUEL PUMP CLAMPIN	8		
10	10	46678	SCREW, CHECK VALUE PLATE	3		
11		46668	ARM, FUEL PUMP	1		
12	10	46676	SCREW, ARM TO FUEL PUMP	1		
13	27	46667	REPAIR KIT, FUEL PUMP	1		
14	27	46677	GASKET, CHECK VALUE PLA	1		
15	27	46672	GASKET, FUEL PUMP FILTER	1		
16	16	46522	STUD, FUEL PUMP TO CYLINDE	2		
17		46520	PLATE, MOUNTING- FUEL PUM	1		
18	27	46521	GASKET, FUEL PUMP MOUNTIN	1		
19	10	46517	SCREW, FUEL PUMP MOUNTIN	1		
20	13	46523	LOCKWASHER, FUEL PUMP MOL	1		
21	27	37137	GASKET, FUEL PUMP	1		
22	12	46680	EWASHER, FUEL PUMP STUD	2		
23	11	37140	NUT, FUEL LKPUMP STIUD	2		
24	11	46679	NUT, LOCKING- FUEL PUMP STU	2		
25	32	47593	FUEL LINE, FUEL PUMP TO CABL	1		
26	1346	2770	CARBURETOR ASSEMBLY	1	SEE C10 FOR PARTS BREAKDO	
27	27	45865	GASKET, CARBURETOR	1		
28	16	32908	STUD, CARBURETOR TO INTAKE	1		
29	11	23161	NUT, CARBURETOR STUD	1		
30	10	34354	SCREW, CARBURETOR TO INTA	1		
31	12	38742	WASHER, CARBURETOR SCREW	1		
32		47596	LEVER, THROTTLE	1		
33	16	21553	STUD, THROTTLE LEVER TO EX	1		
34	12	26825	WASHER, THROTTLE LEVER ST	2		
35	23	31831	SLEEVE, THROTTLE LEVER STU	1		
36	11	20102	NUT, THROTTLE LEVER STUD	1		
37	24	33453	SPRING, THROTTLE RETURN- T	1		
38	12	30164	WASHER, THROTTLE CABLE TO	1		
39	11	20110	NUT, THROTTLE CABLE TO THR	1		
40		47599	SWIVEL, LINK ROD TO THROTTL	1		
41		47597	LINK ROD, THROTTLE LEVER S	1		