



2505

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		38163A 3	TRANSOM PLATE ASSEMBLY	1	(S/N-2228315 & Below)	
1		47154A 2	TRANSOM PLATE ASSEMBLY	1	(S/N-2228316 & Up)	
2	26	38235	OIL SEAL	1	(S/N-2228315 & Below)	
2	26	46970	OIL SEAL	1	(S/N-2228316 & Up)	
3		38371	EXHAUST SEAL	1	(S/N-2228315 & Below)	
3		38371	EXHAUST SEAL	1	(S/N-2228316 & Up)	
4	25	31144	O RING-Exhaust Cover	1		
5		38165	EXHAUST COVER	1		
6	10	38870	SCREW-Exhaust Cover to Transom	13		
7	10	38874	SCREW-Exhaust Cover to Transom	2		
8	11	34688	NUT-Exhaust Cover Screw	14		
9	38	38234	NAME PLATE	1		
10	10	22290	DRIVE SCREW-Name Plate to Transom	2		
11	22	38939	COUPLING-Water Inlet Hose	1		
12	10	38245	SCREW-Flywheel Housing to Transom	1		
13	12	38246	WASHER-Fiber-Flywheel Housing Screw	2		
14	23	38247	SLEEVE-Flywheel Housing Screw	1		
15	11	38248	NUT-Flywheel Housing Screw	1		
16	16	20353	STUD-Shift Cable to Transom Plate	1		
17	23	31866	SPACER-Shift Cable Stud	1		
18	12	39143	WASHER-Shift Cable Stud	2		
19	11	20361	NUT-Shift Cable Stud	1		
20		38372	ANCHOR-Sender Housing-Transom	1		
21	10	21477	SCREW-Sender Housing Anchor to Transom	2		
22	13	26993	LOCKWASHER-Sender Housing Anchor	2		
23	12	26825	WASHER-Sender Housing Anchor	2		
24	10	22659	SCREW-Sender Housing to Anchor	1		
25	23	31866	SPACER-Sender Housing Screw	1		
26	12	39143	WASHER-Sender Housing Screw	2		
27	11	20361	NUT-Sender Housing Screw	1		
28	32	38186	STEERING CABLE GUIDE TUBE	1		
29	12	38239	WASHER-Fiber-Steering Cable Guide Tube	2		
30	23	38684	SLEEVE-Steering Cable Tube-Transom	1		
31	11	37984	NUT-Steering Cable Guide Tube	2		
32		38194	SHIFT CABLE LEVER-Transom Plate	1	(S/N-2640854 & Below)	
32		49704A 1	SHIFT CABLE LEVER-Transom Plate	1	(S/N-2640855 & Up)	
33	16	20789	STUD	1	(S/N-2640855 & Up)	
34	12	39143	WASHER-Shift Lever Stud	1	(S/N-2640855 & Up)	
35	11	20361	NUT-Shift Lever Stud	1	(S/N-2640855 & Up)	
36	16	32698	STUD-Shift Cable Lever to Transom	1		
37	22	31759	SPACER-Shift Cable Lever Stud	1		