



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46009	WIRING HARNESS, EXTERNAL	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3		38532	BRACKET, MOUNTING - WIRING	1		
4	10	46718	SCREW, WIRING HARNESS PLA	4		
5	13	26995	LOCKWASHER, WIRING HARNES	4		
6	10	21548	SCREW, MOUNTING BRACKET T	2		
7	13	26992	LOCKWASHER, MOUNTING BRA	2		
8		32786	TAB, WIRING HARNESS CLIP	1		
9	10	28524	SCREW, WIRING HARNESS CLIF	1		
10	54	22690	CLIP, WIRING HARNESS	1		
11	10	20191	SCREW, WIRING HARNESS CLIF	1		
12		22789	"D" WASHER, WIRING HARNES	1		
13	11	26419	NUT, WIRING HARNESS CLIP SC	1		
14	54	46770	CLAMP, WIRING HARNESS TO V	1		
15	10	29227	SCREW, WIRING HARNESS CLAI	1		
16	11	26768	NUT, WIRING HARNESS CLAMP	1		
17		33865	BINDER, NYLON- WIRING HARNI	2		
18	10	24231	SCREW, WIRING HARNESS LEA	2		
19	11	20645	NUT, WIRING HARNESS LEAD S	2		
20	23	32914	SLEEVE, WIRING HARNESS LEA	2		
21	50	46640	STARTER MOTOR ASSEMBLY	1	SEE C2 FOR PARTS BREAKDOV	
22	10	37388	SCREW, STARTER MOTOR AND	1		
22	10	46197	SCREW, STARTER MOTOR AND	2		
23	11	33962	NUT, STARTER MOTER AND FLY	3		
24		38540	BATTERY CABLE, POSITIVE (REC	1		
25		38539	BATTERY CABLE NEGATIVE (BL	1		
26	54	22627	CLAMP, BATTERY CABLE TO BO	2		
27	10	22793	SCREW, BATTERY CABLE CLAMI	2		
28		22789	"D" WASHER, BATTERY CABLE	2		
29		38534	WATER TEMPERATURE SENDE	1	SERIAL 00000000-02322195	
30	10	20681	SCREW, WATER TEMPERATUI	1	SERIAL 00000000-02322195	
29A		48952	WATER TEMPERATURE SENDE	1	SERIAL 02322196-09999999	
	13	26996	LOCKWASHER, WATER TEMPEF	1	SERIAL 02322196-09999999	
29A	11	20645	NUT, WATER TEMPERATURE SE	1	SERIAL 02322196-09999999	
31		38559	OIL PRESSURE SENDER ASSEM	1		
32	12	20878	WASHER, OIL PRESSURE SENC	1		
33	11	20645	NUT, OIL PRESSURE SENDER	1		
34		38557	ADAPTOR, OIL PRESSURE SENC	1		
35	27	38558	GASKET, OIL PRESSURE SENDE	1		
36		45660	BRACKET, MOUNTING-STARTER	1		
37	10	22221	SCREW, MOUNTING BRACKET T	4		