



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		46619	DISTRIBUTOR ASSEMBLY, COMF	1			
2		46630	CAP ASSEMBLY, DISTRIBUTOR	1			
3		46631	BALL AND SPRING ASSEMBLY	1			
4		46632	ROTOR, DISTRIBUTOR	1			
5	12	46967	WASHER, FELT-DISTRIBUTOR	1			
6		46969	SHIELD, BREAKER ASSEMBLY	1			
7		46635	BREAKER ASSEMBLY, DISTRIE	1			
8	112	46634	BREAKER ASSEMBLY, DISTRIE	1			
9	18	46633	BREAKER ASSEMBLY, DISTRIE	1			
10	10	46636	SCREW, BREAKER ASSEMBLY	1			
10		46637	BASE, BREAKER ASSEMBLY	1			
11		46968	PLATE, MOUNTING-BREAKER	1			
12	24	46638	SPRING, TENSION-WIPER	1			
13		46639	WIPER, DISTRIBUTOR ROTOR	1			
14	24	46620	SPRING, CAM BREAKER ADVAI	1			
15	24	46621	SPRING, CAM BREAKER ADVAI	1			
16		46626	CONDENSER	1			
17	10	46629	SCREW, CONDENSER TO DIST	1			
18	13	46627	LOCKWASHER, CONDENSER E	1			
19	13	46628	LOCKWASHER, CONDENSER E	1			
20		46625	RETAINER KIT, DISTRIBUTOR	1			
21	10	46622	SCREW, PRIMARY TERMINAL	1			
22	17	46623	PIN, DRIVE-MAIN SHAFT	1			
23	24	46624	SPRING, MAIN SHAFT	1			
24		38542	LEAD ASSEMBLY, COIL TO DIST	1			
25		38547	COIL ASSEMBLY, IGNITION	1			
26	54	33271	CLAMP, LOCK-COIL TERMINAL	2			
27	13	26996	LOCKWASHER, COIL TERMINA	2			
28	11	33277	NUT, COIL TERMINAL	2			
29		46686	BRACKET, COIL MOUNTING	1			
30	10	46533	SCREW, COIL MOUNTING BRAC	2			
31	12	37175	LOCKWASHER, COIL MOUNTING	2			
32	54	38537	CLIP, WIRING HARNESS- COIL M	1			
33		37036	CLAMP, DISTRIBUTOR TO CYLIN	1			
34	16	46566	STUD, DISTRIBUTOR CLAMP TO	1			
35	12	37175	WASHER, DISTRIBUTOR CLAMP	1			
36	11	46571	NUT, DISTRIBUTOR CLAMP STU	1			
37	27	37058	GASKET, DISTRIBUTOR	1			
38		46010A	LEAD ASSEMBLY, HIGH TENSIO	4			
39		47604A	PROTECTOR, HIGH TENSION L	4			
40	22	46625	SPARK PLUG (AC 4421)	4			