



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		821847A 6	TRANSMISSION ASSEMBLY (COM	1	
1		821847A 5	TRANSMISSION	1	
2		47613	SWITCH-Neutral	1	
3	22	47629	ELBOW-Transmission To Oil Hos	2	
4	22	88517	FITTING-Reducing-Transmission	1	
5		47339A 4	COUPLING ASSY-Engine To Tra	1	
6	19	47463	PLUG-Expansion-Engine Coupli	1	
7	53	47469	RING-Snap-Bearing To Eng Co	1	
8	23	47471	BEARING-Engine Coupling	1	
9	24	47755	SPRING-Guide-Engine Couplin	1	
10	30	47470	BEARING-Ball	1	
11		47333A 1	HOUSING ASSEMBLY-Bearing S	1	
12	25	47756	O RING-Bearing Support Housi	1	2
13	26	47465	SEAL-Oil-Bearing Support Hous	1	
14	31	47468	BEARING-Needle-Support Hou	1	
15	27	47903	GASKET-Bearing Support Housi	1	
16	10	47462	SCREW (.437-14 x 1.250)	8	
17	13	32993	LOCKWASHER (.437)	8	
18		48461	ADAPTOR-Oil Level Gauge Tube	1	
19	25	48462	O RING-Oil Level Tube Adaptor	1	
20		48463	TUBE-Oil Level Gauge	1	
21		48464	GAUGE-Oil Level	1	
22	25	35276	O RING-Oil Level Gauge	1	
23		48466	BRACKET-Mount-Oil Level Gaug	1	
24	10	34290	SCREW (.250-20 x .625)	2	
25	13	26992	LOCKWASHER (.250)	2	
26		47340A 1	BRACKET ASSY-Trans Mount (P	1	
27		35852	MOUNT-Transmission Mount Bi	1	
28	10	47462	SCREW (.437-14 x 1.250)	2	
29	13	32993	LOCKWASHER (.437)	2	
30	10	47467	SCREW (.625-18 x 5.500)	2	
31	12	47466	WASHER (NEOPRENE)-Tailstoc	4	
32	12	47475	WASHER-Tailstock Screws	2	
33	13	34846	LOCKWASHER-Tailstock Screws	2	
34	12	33171	WASHER-Tailstock Screws	2	
35	11	22339	NUT (.625-18)	2	
36	87	88031	SWITCH-Temperature	1	
37	32	47516 6	HOSE (30.00 In.)-Trans To Oil Co	2	
38	10	60179	SCREW (.437-14 x 3.500)	6	
39	13	32993	LOCKWASHER (.437)	6	