



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A38	PUMP ASSEMBLY-Sea Water	1		
2	46	72774A89	BODY/IMPELLER KIT-Sea Water	1		
3	27	805215	GASKET-Cover to Outer Wear	1		
4	27	94914	GASKET-Body to Wear Plate	2		
5	47	59362	IMPELLER (USE WITHOUT KE	1		
6	25	94288	RING-Quad-Pump Housing	1		
7		87631A	COVER KIT-Sea Water Pump	1	(ALSO INCLUDES #3)	
8	12	20084	WASHER	5		
9	10	73275	SCREW (.312-18 x 2.875)	5		
10		94916	WEAR PLATE-Outer	1		
11		94576	WEAR PLATE-Inner	1		
12	46	94913A	HOUSING ASSEMBLY-Sea Wat	1		
13	26	90562	SEAL-Oil-Sea Water Pump Sha	2		
14	30	72961	BEARING-Ball-Sea Water Pump	2		
15		59501A	SHAFT-Sea Water Pump	1		
16	53	23720	RING-Retaining-Ball Bearing	1		
17	26	72785	SEAL-Oil-Sea Water Pump Sha	1		
18		47530	HUB-Sea Water Pump Pulley	1		
19	19	59504	PLUG-Impeller	1		
20	28	56662	KEY-Impeller Drive	1		
21		73798	PULLEY-Sea Water Pump (BLUE)	1		
22	10	47277	SCREW (.312-24 x .750)	4		
23	13	39107	LOCKWASHER (.312)	4		
24	22	32802	PLUG-Pipe (.125-27)	1	(FOR WATER PUMP BODY)	3
25	57	847889	V BELT-Sea Water Pump	1		
26		47489	BRACKET-Sea Water Pump	1		
27	10	34354	SCREW (.375-16 x 1.500)	1		
28	13	35048	LOCKWASHER (.375)	1		
29	13	32993	LOCKWASHER (.437)	2		
30	12	27025	WASHER	1		
31	10	47462	SCREW (.437-14 x 1.00) Bracket tc	1		
32	10	48948	SCREW (.437-14 x .875) Bracket tc	1		
33	12	29330	WASHER (For Slot)	1		
34		47544	BRACE-Water Pump	1		
35	10	47462	SCREW (.437-14 x 1.250)	1		
36	13	32993	LOCKWASHER (.437)	1		
37	10	35786	SCREW (.375-24 x 1.00)	1		
38	13	35048	LOCKWASHER (.375)	1		
39	11	46335	NUT (.375-24)	1		