



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		821847A	1 TRANSMISSION ASSEMBLY	1		
1		821847A	5 TRANSMISSION	1		
2		47613	SWITCH-Neutral	1		
3	22	47629	ELBOW-Transmission To Oil Hos	2		
4	22	88517	FITTING-Reducing-Transmission	1		
5	87	88031	SWITCH-Oil Temp	1		
6	54	47483	J CLIP	1		
7	22	63186	FITTING (.125-27) (To Hose On E	1		
-		847145A	1 SUPPORT/LEVER KIT-U Joint	1		
8		846693	SEAL-Housing	1		
9	27	47903	GASKET-Trans to Support Hou	1		
10	16	847030	STUD (.437 x 3.00 In.)	6		
10	16	847031	STUD (.437 x 2.750 In.)	2		
11	12	842922	WASHER	8		
12	11	34933	NUT (.437-20)	8		
13		847052	LEVER-Shift-Transmission	1		
14	11	34059	NUT (#10-32)	5		
15	23	846787	SPACER-Rod End	3		
16		846786	END-Rod	3		
17	10	34994	SCREW (#10-32 x 1.00)	5		
18	11	68219	NUT (#10-32)	3		
19	16	846964	STUD-Shift Rod	1		
20	54	846341	BRACKET-Shift Cable	1		
21		846344	SPACER-Cable Bracket	1		
22	11	34863	NUT (.375-24)	1		
23	12	841388	WASHER	3		
24	12	846783	WASHER-Nylon	1		
25	23	812707	BUSHING	1		
26		847025	ARM-Shift Cable	1		
27		847175	PLATE ASSY-Shift Linkage Mo	1		
28	16	846453	STUD-Mounting Plate	2		
29	11	846869	NUT (.375-16)	2		
-		847123A	1 SUPPDRT ASSEMBLY-U Joint	1		
30		846961	1 HOUSING-U Joint Support	1		
31	26	846497	SEAL-Coupler-Inner	1		
32	31	846477A	1 BEARING ASSY-Coupler-Res	1		
33		846960	SHAFT-Coupling	1		
34	11	67980	NUT (.312-18)	1		
35	12	846967	WASHER	2		
36	23	847027	SEAL-Coupler	1		
37	10	847209	SCREW (.275-18 x 1.250)	1		