


**HOLLEY**

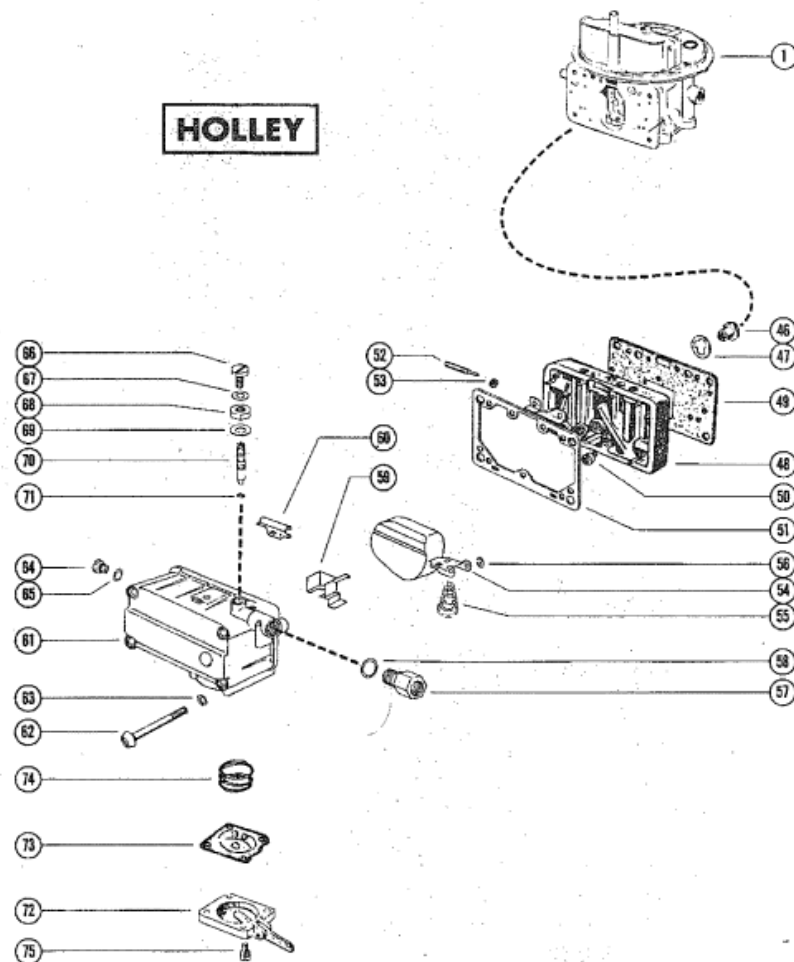

Parts List					
Ref	Class	Part	Description	Qty	Footnote
46			POWER VALVE ASSEMBLY	1	12
47			GASKET, POWER VALVE	1	10
48	1396	4651	METERING BODY	1	
49			GASKET, METERING BODY	1	10
50	1396	4648	MAIN JET	2	
51			GASKET, FUEL BOWL	1	10
52			NEEDLE, IDLE ADJUSTING	2	12
53			SEAL, IDLE ADJUSTING NEEDL	2	10
54	1396	4088	FLOAT ASSEMBLY	1	
55	1396	4104	SPRING, FLOAT	1	
56			RETAINER, FLOAT	1	12
57	1396	4090	FITTING, FUEL INLET	1	
58			GASKET, FUEL INLET FITTING	1	10
59	1396	4152	BAFFLE, FUEL BOWL	1	
60	1396	4151	BAFFLE, METERING BODY	1	
61	1396	4650	FUEL BOWL ASSEMBLY	1	
62	1396	4126	SCREW, FUEL BOWL ATTACHI	4	
63			GASKET, FUEL BOWL SCREW	4	10
64	1396	4344	PLUG, CHECK - FUEL LEVEL	1	
65			GASKET, FUEL LEVEL CHECK F	1	10
66	1396	4137	SCREW, LOCKING - FUEL VALV	1	
67			GASKET, VALVE SEAT LOCKINI	1	10
68	1396	4140	NUT, ADJUSTING - FUEL VALV	1	
69			GASKET, VALVE SEAT ADJUST	1	10
70			FUEL VALVE ASSEMBLY	1	12
71			"O" RING, FUEL VALVE	1	10
72	1396	4097	COVER, FUEL PUMP	1	
73			DIAPHRAGM ASSEMBLY	1	12
74	1396	4103	SPRING, DIAPHRAGM RETURN	1	
75	1396	4644	SCREW, FUEL PUMP COVER A	4	
--	1396	4655	GASKET KIT	1	
--	1396	4656	REPAIR KIT	1	