



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		60351	WIRING HARNESS	1	(SERIAL 00000000-03245667)	
1	84	62137	WIRING HARNESS	1	(SERIAL 03245668-03465227)	
1	84	64493	WIRING HARNESS	1	(SERIAL 03465228-03777486)	
1	84	66964	WIRING HARNESS	1	(SERIAL 03777490-04166999)	
1	84	71150	WIRING HARNESS	1	(SERIAL 04167000-09999999)	
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		60341	BRACKET, MOUNTING - WIRING	1	(SERIAL 00000000-03465227)	
5	10	35386	SCREW, MOUNTING BRACKET A	2	(SERIAL 00000000-03465227)	
6	13	39107	LOCKWASHER, MOUNTING BRA	2	(SERIAL 00000000-03465227)	
7	23	55737	SPACER, BRACKET TO MANIF	1	(SERIAL 00000000-03465227)	
8		39974	CONNECTOR, TRIM LEADS - MOI	2	(SERIAL 00000000-03777489)	
9	10	24637	SCREW, CONNECTOR TO MOUN	2	(SERIAL 00000000-03777489)	
10		59816	CIRCUIT BREAKER	1	(SERIAL 00000000-03777489)	
10	88	65093	CIRCUIT BREAKER	1	(SERIAL 03245668-09999999)	
11	10	47618	SCREW, CIRCUIT BREAKER TO	2	(SERIAL 03245668-09999999)	
12	12	47960	WASHER, CIRCUIT BREAKER SC	4	(SERIAL 03245668-09999999)	
13	25	61999	GROMMET, CIRCUIT BREAKER E	4	(SERIAL 03245668-09999999)	
14	23	61998	SPACER, CIRCUIT BREAKER GRI	2	(SERIAL 03245668-09999999)	
14A	12	30164	WASHER, CIRCUIT BREAKER SC	2	(SERIAL 03245668-09999999)	
15	11	46438	NUT, CURCUIT BREAKER SCRE	2	(SERIAL 03245668-09999999)	
16		62093	BRACKET, CIRCUIT BREAKER	1	(SERIAL 03245668-03465227)	
17	10	27165	SCREW, BRACKET TO EXHAUST	2	(SERIAL 03245668-03465227)	
18		64636	BRACKET, CIRCUIT BREAKER	1	(SERIAL 03245668-09999999)	
18		70649	BRACKET, CIRCUIT BREAKER/w	1	(SERIAL 03245668-09999999)	
19	10	59645	SCREW, BRACKET TO INTAKE M	1	(SERIAL 03245668-09999999)	
20	10	35386	SCREW, BRACKET TO INTAKE M	3	(SERIAL 03245668-09999999)	
21	13	39107	LOCKWASHER, BRACKET SCRE	3	(SERIAL 03245668-09999999)	
22		61990	STA-STRAP, WIRING HARNESS	3		
23		45915	TERMINAL BLOCK	1	(SERIAL 04466390-09999999)	
24	10	48591	SCREW, TERMINAL BLOCK TO v	1	(SERIAL 04466390-09999999)	
25	10	62568	SCREW, LEADS TO TERMINAL B	1		
26	54	61001	"J" CLIP, WIRING HARNESS TO	1		
27		54869	BRACKET, MOUNTING - STARTE	1		
28		36177	INSULATOR, SOLENOID TO MOL	1	(SERIAL 00000000-04612109)	
29		65057	STARTER SOLENOID	1	(SERIAL 00000000-04612109)	
30	10	22956	SCREW, STARTER SOLENOID TI	2	(SERIAL 00000000-04612109)	
29	89	76416A	STARTER SOLENOID	1	(SERIAL 04612110-09999999)	
30	10	69028	SCREW, STARTER SOLENOID TC	2	(SERIAL 04612110-09999999)	
31	12	22937	WASHER, STARTER SOLENOID	2		
32	11	20586	NUT, STARTER SOLENOID SCRE	2	(SERIAL 00000000-04612109)	