



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		59823A	FLYWHEEL HOUSING ASSEMBLY	1		
2		33149	MOUNT, RUBBER - FLYWHEEL	2		
3	23	46742	SPACER, RUBBER MOUNT - FL	2		
4	10	47462	SCREW, FLYWHEEL HOUSING A	3		
4	10	54847	SCREW, FLYWHEEL HOUSING A	1		
5	13	32993	LOCKWASHER, FLYWHEEL HOU	3		
5	13	30381	LOCKWASHER, FLYWHEEL HOU	1		
6		56878	PLATE, COVER - REAR	1	SERIAL 00000000-03833159	
6		68651	PLATE, COVER - REAR	1	SERIAL 03833160-09999999	
7	27	56152	SEAL, REAR COVER PLATE	1		4
8	10	25299	SCREW, FLYWHEEL HOUSING A	2		
9	13	39107	LOCKWASHER, FLYWHEEL HOU	2		