



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY	1	
2	25	26834	"O"RING, HYDRAULIC PUMP T	4	
3		48077A 3	CONTROL VALVE ASSEMBLY	1	
	25	26834	"O"RING, HYDRAULIC PUMP T	4	
4	22	38609	PLUG, CONTROL VALVE	1	
5	10	21091	SCREW, CONTROL VALVE TO G	4	
6	13	26992	LOCKWASHER, CONTROL VALVE	4	
7		58397A 3	BRACKET ASSEMBLY, MOUNTIN	1	
8		58491	BUMPER, RUBBER-MOUNTING	2	
9	10	59784	SCREW, PUMP MOUNTING BRAC	6	
10	12	29245	WASHER, PUMP MOUNTING BR	6	
11		45377	BRACKET, MOUNTING- HYDRAU	2	
12	10	24234	SCREW, HYDRAULIC PUMP TO F	4	
13	13	39107	LOCKWASHER, HYDRAULIC PUM	4	
14	11	21908	NUT, HYDRAULIC PUMP SCREW	4	
15	10	28009	SCREW, PUMP MOUNTING BRAC	2	
16	11	35304	NUT, PUMP MOUNTING BRACK	2	
17		45325	CONNECTOR AND HARNESS (GF	1	
17	84	74023	CONNECTOR AND HARNESS (GR	1	
18		45559	TERMINAL BLOCK, HYDRAULIC	1	
19	10	35519	SCREW, TERMINAL BLOCK (1/2"	2	
20	10	62568	SCREW, HARNESS LEADS TO TE	2	
21		57756	WIRING HARNESS, HYDRAULIC	1	
22		25661	STARTER SOLENOID	1	SEE PHOTO FOR CORRECT SOI
22	89	68258	STARTER SOLENOID	1	SEE PHOTO FOR CORRECT SOI
24	13	26996	LOCKWASHER, STARTER SOLEI	2	
25	11	20645	NUT, STARTER SOLENOID TERM	2	
26	13	26993	LOCKWASHER, STARTER SOLEI	2	
27	11	20083	NUT, STARTER SOLENOID TERM	2	
27	11	68292	NUT, STARTER SOLENOID TERM	2	
28		46265	BOOT, RUBBER- STARTER SOLE	2	
29	10	34290	SCREW, STARTER SOLENOID TC	2	
29	10	69052	SCREW, STARTER SOLENOID TI	2	
30	13	26992	LOCKWASHER, STARTER SOLEI	2	
31	11	21825	NUT, STARTER SOLENOID SCRE	2	
32		74407	BRACKET, MOUNTING - STARTE	1	
33	10	21140	SCREW, MOJNTING BRACKET TI	2	
34	13	26992	LOCKWASHER, MOUNTING BRA	2	
35	13	27660	LOCKWASHER, HYDRAULIC PUM	1	
36	11	24656	NUT, MOUNTING BRACKET TO H	1	
		55642A 7	CONTROL PANEL ASSEMBLY, CC	1	