



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		93911A 4	HOUSING ASSEMBLY, SHAFT	1		
2	22	74036	GREASE FITTING	1		
3	10	47651	SCREW, HOUSING	6		
4	13	32993	LOCKWASHER, HOUSING SCREW	6		
5		93923A 1	MOUNT ASSEMBLY, ENGINE	2		
6	10	47651	SCREW, MOUNT	4		
7	13	32993	LOCKWASHER, MOUNT SCREW	4		
8		86019A 1	HOUSING, FLYWHEEL	1		
9		93917A 4	COVER ASSEMBLY, FLYWHEEL	1		
10	27	86015	GASKET, FLYWHEEL HOUSING	1		
11	10	98253	SCREW, COVER TO FLYWHEEL	7		
12	13	26992	LOCKWASHER, COVER SCREW	7		
13	10	37612	SCREW, FLYWHEEL HOUSING (1)	2		
13	10	47688	SCREW, FLYWHEEL HOUSING (2)	2		
14	13	35048	LOCKWASHER, FLYWHEEL HOU	6		
15	12	20572	WASHER, FLYWHEEL HOUSING	1		
16	54	92850	J CLAMP, FLYWHEEL HOUSING	1		
17	16	64066	STUD, FLYWHEEL HOUSING (2-1)	1		
18	11	32219	NUT, FLYWHEEL HOUSING STUI	1		
19		93920	PLATE, FLYWHEEL HOUSING	1		
20	10	33212	SCREW, PLATE	2		
21	13	32993	LOCKWASHER, PLATE SCREW	2		