

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	57	77274	V-BELT, PUMP (39 1/2") -LOW MO	1		
1	57	91035	V-BELT, PUMP (49 1/2) -HIGH MO	1		
2		73873	PULLEY, STERRING PUMP	1		
3		57611	BRACKET, PUMP (LOW MOUNTE	1		
3		90981A 2	BRACKET, PUMP (HIGH MOUNTE	1		
4	10	32132	SCREW, STERRING PUMP TO BF	1		
4	10	40001203	SCREW, STERRING PUMP TO BF	1		
5	13	35048	LOCKWASHER, STEERING PUMF	1		
5	13	40024008	LOCKWASHER, STEERING PUMF	1		
6	23	36534	SPACER, STEERING PUMP SCRE	1		
6	23	90523	SPACER, STEERING PUMP SCRE	1		
7	10	34354	SCREW, BRACKET TO CYLINDE	2		
8	13	35048	LOCKWASHER, BRACKET SCREW	2		
9	12	38622	WASHER, BRACKET SCREW (FO	1		
10	11	68411	NUT, STEERING PUMP STUD (NI	1		
10	11	90517	NUT, STEERING PUMP STUD (M	1		
11		49770	OIL COOLER (SERIAL #5182832 /	1		
11		77912	OIL COOLER (SERIAL #5182833 /	1		
12	54	32781	CLAMP, OIL COOLER TO BRACKE	2		
13	54	64324	CLAMP, HOSE ATTACHING TO O	2		
14		49748A 1	BRACKET ASSEMBLY, OIL COOLI	1		
15		49735	BRACKET, OIL COOLER MOUNT	1		
16	10	20359	SCREW, OIL COOLER MOUNT BF	1		
17	11	68411	NUT, MOUNT BRACKET SCREW	1		
18	22	37760	ELBOW, OIL COOLER	1		
19		85011A 1	BRACKET, HYDRAULIC PUMP	1		
20	10	26487	SCREW, BRACKET TO HYDRAUL	2		
20	10	40001194	SCREW, BRACKET TO HYDRAUL	2		
21	13	35048	LOCKWASHER, BRACKET SCREW	2		
21	13	40024008	LOCKWASHER, BRACKET SCREW	2		
22	23	36365	SPACER, BRACKET SCREW (NOI	2		
22	23	90520	SPACER, BRACKET SCREW (ME	2		
23		88777	BRACE, POWER STEERING PUM	1		
24	10	37612	SCREW, BRACE TO BRACKET (1	1	SERIAL 00000000-#5182832	
25	12	34714	WASHER, BRACE SCREW	1	SERIAL 00000000-#5182832	
24	10	34353	SCREW, BRACE TO BRACKET (1'	1	SERIAL #5182833-09999999	
25	12	38622	WASHER, BRACE SCREW	1	SERIAL #5182833-09999999	
26	13	35048	LOCKWASHER, BRACE SCREW	1		
27	11	32219	NUT, BRACE SCREW	1		
28	10	76326	SCREW, BRACE TO ENGINE (5/8	1		
29	13	35048	LOCKWASHER, BRACE SCREW	1		

