



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	65784A 1	STARTER MOTOR ASSEMBLY,CI	1		
-	50	65785A 1	STARTER MOTOR ASSEMBLY,CI	.1		
1		68610	HOUSING, DRIVE END	1,1		
2	23	33278	BUSHING, DRIVE END HOUS	1,1		
3		33292	COLLAR, THRUST-DRIVE END	1,1		
4	53	33290	RING, RETAINING-PINION STO	1,1		
5		33291	COLLAR, PINION STOP-DRIVE	1,1		
6		68608	DRIVE ASSEMBLY, CLUTCH-AF	1,		
6		68609	DRIVE ASSEMBLY, CLUTCH-AF	.1		
7	23	33369	BUSHING, GEAR END-CLUTC	1,1		
8	24	33368	SPRING, CLUTCH DRIVE	1,1		
9		N. S. S.	COLLAR, CLUTCH DRIVE (D	1,1		
10		33367	LOCKWIRE, COLLAR AND SP	1,1		
11		68620	PLATE, BEARING	1,1		
12	23	68616	BUSHING, BEARING PLATE	1,1		
13	12	68614	WASHER, BEARING PLATE	1,1		
14	10	68612	SCREW, BEARING PLATE ATT	2,2		
15	13	68611	LOCKWASHER, BEARING PLATE	2,2		
16		68606	ARMATURE	1,		
16		68607	ARMATURE	.1		
17		48263	SHOE, POLE-FIELD COIL	4,4		
18	10	45533	SCREW, POLE SHOE TO FIELD	4,4		
19	25	68618	GROMMET, FIELD COIL-FIELD F	OPT,OI		
19	25	68619	GROMMET, FIELD COIL-FIELD F	OPT,OI		
20		68598	FIELD COIL ASSEMBLY	1,		
20		68599	FIELD COIL ASSEMBLY	.1		
21		68605	COIL, SHUNT-FIELD COIL	1,1		
22	12	68613	WASHER, LEATHER -COMMUT	1,1		
23		33295	FRAME, COMMUTATOR END-LI	1,1		
24	10	33286	BOLT, THRU-COMMUTATOR EI	2,2		
25		33284	HOLDER, INSULATOR-FIELD F	2,2		
26		33283	HOLDER, FIELD FRAME BRUSH	2,2		
27		33270	BRUSH, FIELD FRAME	4,4		
28	10	46888	SCREW, BRUSH LEAD TO FIEL	2,2		
28	10	60685	SCREW, BRUSH LEAD TO FIEL	2,2		
29		33294	SUPPORT PACKAGE, GROUND	2,2		
30	17	45535	PIN, GROUND AND INSULATI	1,1		
31		60686	LEAD, FIELD FRAME BRUSH	2,2		
32	10	33250	SCREW, SUPPORT TO FIELD	4,4		
33	13	26396	LOCKWASHER, SUPPORT SC	4,4		
34	11	20868	NUT, SUPPORT SCREW	4,4		