



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	76965A 3	STARTER MOTOR ASSEMBLY, C	1,...		
-	50	79604A 3	STARTER MOTOR ASSEMBLY, C	,1,...		
-	50	79822A 2	STARTER MOTOR ASSEMBLY, C	,...1		
-	50	79821A 2	STARTER MOTOR ASSEMBLY, C	,...1		
1		79206	HOUSING, DRIVE END	1,...		
1		71696	HOUSING, DRIVE END	,,1,1		
2	23	33369	BUSHING, DRIVE END HOUS	1,1,1,1		
3		33292	COLLAR, THRUST - DRIVE EN	1,1,1,1		
4	53	33290	RING, RETAINING - PINION ST	1,1,1,1		
5		33291	COLLAR, PINION STOP - DRIVE	1,1,1,1		
6		68608	DRIVE ASSEMBLY, CLUTCH - A	1,...		
6		68609	DRIVE ASSEMBLY, CLUTCH - A	,1,...		
6		79205	DRIVE ASSEMBLY, CLUTCH - A	,,1,1		
7	23	33369	BUSHING, GEAR END - CLUT	1,1,1,1		
8	24	33368	SPRING, CLUTCH DRIVE	1,1,1,1		
9		N. S. S.	COLLAR, CLUTCH DRIVE (DE	1,1,1,1		
10		33367	LOCKWIRE, COLLAR AND SP	1,1,1,1		
11		79396	PLATE, BEARING	1,1,1		
11		N. S. S.	PLATE, BEARING (DELCO REMY	,,1,1		
12	23	71694	BUSHING, BEARING PLATE	1,1,1,1		
13	12	68614	WASHER, BEARING PLATE	1,1,1,1		
14	10	75659	SCREW, BEARING PLATE ATT	2,2,2		
14	10	79209	SCREW, BEARING PLATE ATT	,,2,2		
15	13	26996	LOCKWASHER, BEARING PLAT	2,2,2,2		
16		75665	ARMATURE	,,1,		
16		68606	ARMATURE	1,...		
16		68607	ARMATURE	,1,...		
16		71693	ARMATURE	,...1		
17		N. S. S.	SHOE, POLE - FIELD COIL (DEL	4,4,4,		
17		N. S. S.	SHOE, POLE - FIELD COIL (DEL	,...4		
18		N. S. S.	SCREW, POLE SHOE T FIELD C	4,4,4,4		
19		33293	INSULATION, FIELD COIL	,...4		
20	25	68619	GROMMET, FIELD COIL - FIELD	1,1,1,		
20	25	79208	GROMMET, FIELD COIL - FIELD	,,1,1		
21		75664	FIELD COIL ASSEMBLY	,1,1,		
21		48272	FIELD COIL ASSEMBLY	1,...		
21		79212	FIELD COIL ASSEMBLY	,...1		
23	12	33258	WASHER, LEATHER - COMMU	,,1,1		
24		33295	FRAME, COMMUTATOR END - I	1,1,1		
24		79211	FRAME, COMMUTATOR END - I	,,1,1		
25	10	22296	BOLT, THRU COMMUTATOR	1,1		