



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	77439	WIRING HARNESS (STERN DRIV	1		
1	84	86676A	WIRING HARNESS (STERN DRIV	1	SERIAL 00000000-#5820292	
1	84	93177A	WIRING HARNESS (STERN DRIV	1	SERIAL #5820293-09999999	
1	84	78266A	WIRING HARNESS (INBOARD)	1		
2		26079	PALTE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		77440	BRACKET, MOUNTING STERN D	1		
5	10	34354	SCREW, MOUNTING BRACKET A	2		
4		64709	BRACKET, MOUNTING INBOARD	1		
5	10	52498	SCREW, MOUNTING BRACKET A	2		
6	13	35048	LOCKWASHER, MOUNTING BRCA	2		
7	11	20696	NUT, MOUNTING BRACKET SCR	2		
8		64884	TAB, WIRING HARNESS (USED V	1		
8	54	55098	"J" CLIP (USED WIT B-84-86676A	1		
9	89	76416A	STARTER SOLENOID STERN DR	1		
10	10	69028	SCREW, STARTER SOLENOID TI	2		
11	11	20361	NUT, STARTE RSOLENOID SCRE	2		
9	89	68258	STARTER SOLENOID INBOARD	1		
10	10	69054	SCREW, STARTER SOLENOID TI	2		
12	13	26992	LOCKWASHER, STARTER SOLE	2		
13	13	26996	LOCKWASHER, STARTER SOLE	2		
14	11	68219	NUT, STARTER SOLENOID TERM	2		
15	13	26993	LOCKWASHER, STARTER SOLE	2		
16	11	68292	NUT, STARTER SOLENOID TERM	2		
17	88	65093	CIRCUIT BREAKER (SERIAL #48E	1		
18	13	26996	LOCKWASHER, CIRCUIT BREA	2		
19	11	68219	NUT, CIRCUIT BREAKER TERM	2		
20	10	24637	SCREW, CIRCUIT BREAKER TO	2		
20	10	47618	SCREW, CIRCUIT BREAKER TO	2		
21	25	61999	GROMMET, CIRCUIT BREAKER	4		
22	12	47960	WASHER, CIRCUIT BREAKER SC	4		
23	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
24	12	30164	WASHER, CIRUCIT BREAKER SC	2		
25	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
26		45915	TERMINAL BLOCK, ROTARY TRII	1		
27	10	62568	SCREW, ROTARY TRIM SENDEF	2		
28	10	22391	SCREW, TERMINAL BLOCK (5/8"	1		
29	11	46438	NUT, TERMINAL BLOCK SCREW	1		
30	54	78945	"J" CLIP, WIRING HARNESS	3		
30	54	78944	"J" CLIP, WIRING HARNESS INB	1		
30	54	78945	"J" CLIP, WIRING HARNESS INB	1		