



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		65535A 4	BELL HOUSING ASSEMBLY	1		
2	27	64818	GASKET, DRIVE SHAFT HSG. T	1	(PART OF DRIVE SHAFT HOUSI	
3	22	33066	CONNECTOR, WATER HOSE T	1		
4	10	69707	SCREW DRIVE - BELL HOUSIN	4		
5		63679	BUMPER, BELL HOUSING	1		
6	23	79372	BUSHING, BELL HOUSING (5/8	1		
7	26	45587	OIL SEAL, BELL HOUSING	1		
8	23	79373	BUSHING, BELL HOUSING (5/1	1		
9	27	35982	GASKET, RUBBER - BELL HOU:	1		
10	25	33504	"O" RING, BELL HOUSING	1		
11	12	72498	WASHER, SYNTHANE - BELL H	2		
12	16	59579	STUD, BELL HOUSING TO DRIV	6		
13	12	35935	WASHER, BELL HOUSING STUD	6		
14	11	34933	NUT, BELL HOUSING STUD	6		
15		60932A 4	BELLOWS ASSEMBLY, UNIVERS.	1		
16	54	31765	CLAMP, UNIVERSAL JOINT BELL	2		
17	32	32461	HOSE, WATER - BELL HOUSING	1		
18	54	32523	CLAMP, WATER HOSE ATTACHM	2		
19		32734A 3	BELLOWS, EXHAUST(IN-LINE EN	1		
19		78458A 1	TUBE, EXHAUST(V-8 ENGINES)	1		
20	54	32533	CLAMP, EXHAUST BELLOWS AT	2		
21		45589A 1	SHAFT ASSEMBLY, SHIFT - UPPE	1		
22		62104	SHAFT, SHIFT - INTERMEDIATE	1		
23	18	32665	COTTER PIN, INTERMEDIATE SH	1		
24	12	32666	WATER, INTERMEDIATE SHIFT	1		
25		45518A 1	LEVER ASSEMBLY, UPPER SHIF	1		
26	12	39116	WASHER, UPPER SHIFT LEVER	1		
27	10	45590	SCREW, UPPER SHIFT LEVER TI	1		
28	54	86049	GROUNDING CLIP, BELLOWS	4		