



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	56295	STUD, DRIVE SHAFT HOUSING	2	
3	22	31704	PLUG, PIPE - DRIVE SHAFT HOUSING	1	
4	19	32652	WELCH PLUG, DRIVE SHAFT HOUSING	1	
5	23	32632	BUSHING, DRIVE SHAFT HOUSING	1	
6	11	34933	NUT, GEAR HOUSING TO DRIVE SHAFT	3	
7	19	32298	PLUG, TRIM TAB HOLE (13/32" DIA) OPT.		
7	19	47579	PLUG, TRIM TAB HOLE (1/2" DIA) OPT.		
8	10	79953	SCREW, DRIVE SHAFT HOUSING	1	
9	12	20260	WASHER, DRIVE SHAFT HOUSING	1	
10		58858A	UNIVERSAL JOINT ASSEMBLY, CENTER	1	
10		59829A	UNIVERSAL JOINT ASSEMBLY, CENTER	1	
11		46020	YOKE, UNIVERSAL JOINT - GEAR	1	
12		39383	SOCKET, CENTER - UNIVERSAL JOINT	1	
13		75832	CROSS AND BEARING ASSEMBLY, UNIVERSAL	2	
14		39385A	YOKE ASSEMBLY, UNIVERSAL	1	
14		59830A	YOKE ASSEMBLY, UNIVERSAL	1	
15	25	25439	"O" RING, UNIVERSAL JOINT	2	15
16		66071	RETAINER, TAPERED ROLLER BEARING	1	
17		35983	RING, ROLLER BEARING RETAINER	1	
18	25	70937	"O" RING, OIL SEAL CARRIER	1	17
19		66081A	CARRIER ASSEMBLY, OIL SEAL	1	
20	26	68493	OIL SEAL, CARRIER	1	17
21	31	35988A	ROLLER BEARING ASSEMBLY, DRIVE	1	
22	23	35985	SPACER, ROLLER BEARING ASSEMBLY	1	
23	15	35980A	SHIM, BEARING CUP TO DRIVE SHAFT	1	
24	15	71013	SHIM, BEARING CUP TO DRIVE SHAFT	1	
25	43	55766A	GEAR ASSEMBLY, COMPLETE	1	
25	43	55765A	GEAR ASSEMBLY, COMPLETE	1	
25	43	75324A	GEAR ASSEMBLY, COMPLETE	1	
25	43	59832A	GEAR ASSEMBLY, COMPLETE	1	
26	31	35990A	ROLLER BEARING ASSEMBLY, PINION	1	
27	12	45810	WASHER, DRIVE GEAR TO UNIVERSAL JOINT	1	
28	11	22339	NUT, DRIVE GEAR TO UNIVERSAL JOINT	1	