



2513

| Parts List | | | | | | |
|------------|-------|----------|----------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 55647A 1 | GIMBAL HOUSING ASSEMBLY | 1 | | |
| 2 | 22 | 31345 | FITTING, Grease - Gimbal Housir | 1 | | |
| 3 | | 29359 | LUBRICAP, Gimbal Housing Grez | 1 | | |
| 4 | | 55880 | COVER, Exhaust - Gimbal Housin | 1 | | |
| 5 | 27 | 55881 | GASKET, Exhaust Cover to Gimb | 1 | | |
| 6 | 10 | 32228 | SCREW, Exhaust Cover to Gimbe | 8 | | |
| 7 | 19 | 38860 | WELCH PLUG, Gimbal Housing f | 1 | | |
| 8 | 23 | 38634 | BUSHING, Synthane - Gimbal Ho | 1 | | |
| 9 | 26 | 32540 | OIL SEAL, Upper Gimbal Housing | 1 | | |
| 10 | 23 | 38196 | BUSHING, Synthane - Gimbal Ho | 1 | | |
| 11 | 26 | 32911 | OIL SEAL, Lower Gimbal Housing | 2 | | |
| 12 | 30 | 31561 | BALL BEARING- Gimbal Housing | 1 | | |
| 13 | | 38188 | MDUNT, Rubber - Gimbal Housin | 1 | | |
| 14 | 10 | 35046 | DRIVE SCREW- Gimbal Housing | 8 | | |
| 15 | 54 | 22875 | CLAMP, Water Tube to Gimbal H | 2 | | |
| 16 | 10 | 37572 | SCREW, Water Tube Clamp to G | 2 | | |
| 17 | | 22789 | "D" WASHER, Water Tube Clam | 2 | | |
| 18 | 27 | 55877 | GASKET, Gimbal Housing to Trar | 1 | | |
| 19 | | 55879 | PILOT RING, Gimbal Housing | 1 | | |
| 20 | 26 | 55878 | SEAL, Water - Gimbal Housing | 1 | | |
| 21 | | 34762A 1 | PLATE ASSEMBLY, Inhibitor - Gii | 1 | | |
| 22 | 10 | 34763 | SCREW, Inhibitor Plate to Gimb | 2 | | |
| 23 | 12 | 49199 | WASHER, Rubber - Gimbal Hous | 2 | | |
| 24 | 32 | 38841 | WATER TUBE- Gimbal Housing | 1 | | |
| 25 | 54 | 38840 | CLAMP, Water Tube to Gimbal H | 1 | | |
| 26 | 10 | 38862 | SCREW, Water Tube Clamp to G | 1 | | |
| 27 | 13 | 26992 | LOCKWASHER, Water Tube Cla | 1 | | |
| 28 | 23 | 38265 | BUSHING, Seal - Water Tube | 1 | | |
| 29 | | 38209 | COVER, Water Tube | 1 | | |
| 30 | 10 | 34290 | SCREW, Water Tube Cover to G | 2 | | |
| 31 | 32 | 46716A 1 | HOSE-Water-Gimbal Housing to E | 1 | | |
| NS | | 56038 | EMBLEM-Gimbal Housing | 1 | | |
| 32 | 54 | 35830 | CLAMP-Water Tube to Gimbal Hou | 2 | | |
| 33 | | 38584 | PLATE-Supporting-Transom Screw | 1 | | |
| 34 | 10 | 38197 | SCREW-Transom to Gimbal Housin | 4 | | |
| 35 | 13 | 30381 | LOCKWASHER-Transom Screw | 4 | | |
| 36 | 12 | 38585 | WASHER-Square-Transom Screw | 2 | | |
| 37 | 10 | 48565 | BOLT-Gimbal Housing to Transom f | 4 | | |
| 38 | 12 | 36041 | WASHER-Gimbal Housing Bolt | 4 | | |
| 38 | 12 | 21900 | WASHER-Gimbal Housing Bolt | 4 | | |
| 39 | 11 | 24087 | NUT-Gimbal Housing Bolt | 4 | | |